

AC SCHNITZER

-Montageanleitung-

Auspuffendblende

- Carbon Sport -

G82-G83 / G80-G81 / G87



1814 382 610

(english version see page 7)

AC Schnitzer Auspuffendblende Carbon Sport G82-G83 / G80-G81 / G87

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keine Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge, bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montagehinweisen vorzugehen.

Als Hersteller sind wir verpflichtet darauf hinzuweisen, dass jegliche Veränderungen, die Sie am für den öffentlichen Verkehr zugelassenen Fahrzeug vornehmen, der Abnahme durch eine Prüfstelle und Eintragung in die Fahrzeugpapiere bedarf !

Da die gesetzlichen Bestimmungen von Land zu Land variieren können, bitten wir Sie sich bei den zuständigen Behörden zu erkundigen.

Montage

Warnung ! Verbrennungsgefahr ! Diese Arbeiten nur an abgekühlter Abgasanlage durchführen !

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **8 AW**

Erforderliches Werkzeug

Feile
Luftsäge o.ä.
Markierungsstift
Inbusschlüssel
Schweißgerät (Schutzgas)
hitzebeständige Farbe (schwarz-matt)

A



4x

A AC Schnitzer Auspuffendblende Carbon Sport

AC Schnitzer Auspuffendblende Carbon Sport G82-G83 / G80-G81 / G87

Montage der AC Schnitzer Auspuffendblende

Achtung !
Verbrennungsgefahr ! Diese Arbeiten nur bei abgekühlter Auspuffanlage durchführen !


Abb. 1
Serienendblenden des Serienschalldämpfers, mit Hilfe eines Gummihammers o.ä., vom Serienschalldämpfer trennen. Serienendblenden nach hinten demontieren, dabei die obere Sicherungsklammer der Serienendblende entriegeln.



Abb. 2
AC Schnitzer Endblende Carbon Sport auf die serienmäßigen Auspuffendrohre aufschieben.



Abb. 3
AC Schnitzer Endblende Carbon Sport im Ausschnitt der Heckschürze ausrichten.

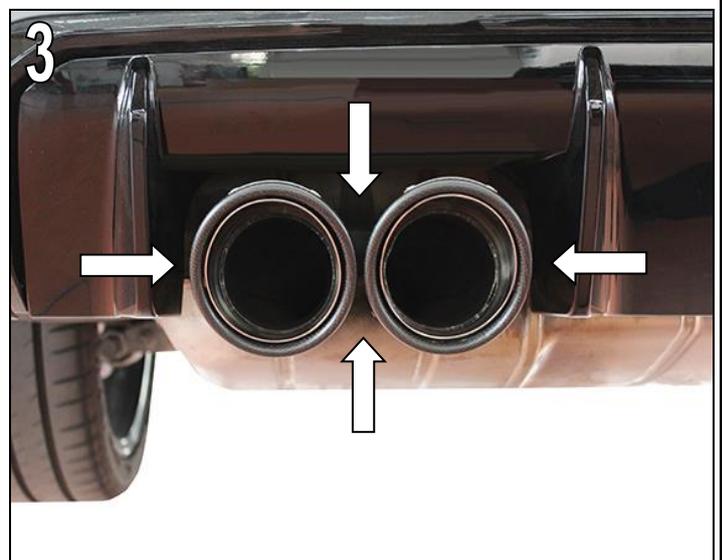

AC Schnitzer Auspuffendblende Carbon Sport G82-G83 / G80-G81 / G87

Montage ...

Abb. 4

AC Schnitzer Endblenden Carbon Sport in der Länge ausrichten

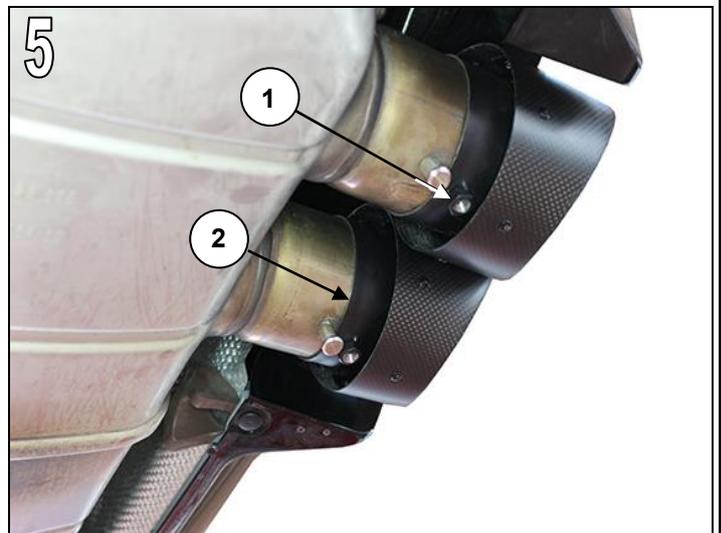


Abb. 5

AC Schnitzer Endblende Carbon Sport mit der Befestigungsmadenschraube (1) festziehen.

AC Schnitzer Endblenden Carbon Sport an den Übergängen mit ausreichend Schweißpunkten (2) sichern.

Sämtliche Schweißpunkte mit hitzebeständiger schwarz-matter Farbe versiegeln.



Irrtum, Änderung sowie technische Weiterentwicklung vorbehalten !

...weitere AC Schnitzer Produkte

AC Schnitzer Frontsplitter 5111 382 510



AC
SCHNITZER

AC SCHNITZER

-Fitting Instructions-

Tailpipe Trim

- Carbon Sport -

G82-G83 / G80-G81 / G87



1814 382 610

General Notes !



AC Schnitzer Tailpipe Trim Carbon Sport G82-G83 / G80-G81 / G87

Important Notes !

These Fitting Instructions must be read in full before beginning installation work. AC Schnitzer bears no liability for damage caused by incorrect installation !

These Fitting Instructions are intended solely for use by authorised AC Schnitzer dealers.

These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge.

All diagrams show LHD vehicles, for RHD vehicles proceed accordingly or follow separate Fitting Instructions.

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test centre and registration in the vehicle documents.

As the legal regulations may vary according to location, please contact the competent authorities for information.

Fitting

Warning. Risk of burns! Only carry out this work on a cold exhaust system !

Carry out all work in accordance with applicable safety regulations (e.g. wear safety goggles).

Fitting Time (1 unit = 5 minutes)

The fitting time is **8 units**

Tools Required

- File
- Air saw or similar
- Marker pen
- Allen key
- Welder (inert gas)
- Heat-resistant paint (matt black)

Components Supplied



AC Schnitzer Tailpipe Trim Carbon Sport G82-G83 / G80-G81 / G87

A



4x

A AC Schnitzer tailpipe trim Carbon Sport

Fitting Instructions

AC Schnitzer Tailpipe Trim Carbon Sport G82-G83 / G80-G81 / G87

Fitting the AC Schnitzer tailpipe trim carbon sport

Attention !

Danger of burns ! Carry out this work only when the exhaust system has cooled down !



Fig. 1

Remove the standard tailpipe trims with a rubber hammer or similar, from the standard silencer. Dismantle the standard tailpipe trims to the rear, unlock the upper retaining clip of the standard tailpipe trims.



Fig. 2

Push the AC Schnitzer Carbon Sport tailpipe trims onto the standard exhaust tailpipes.

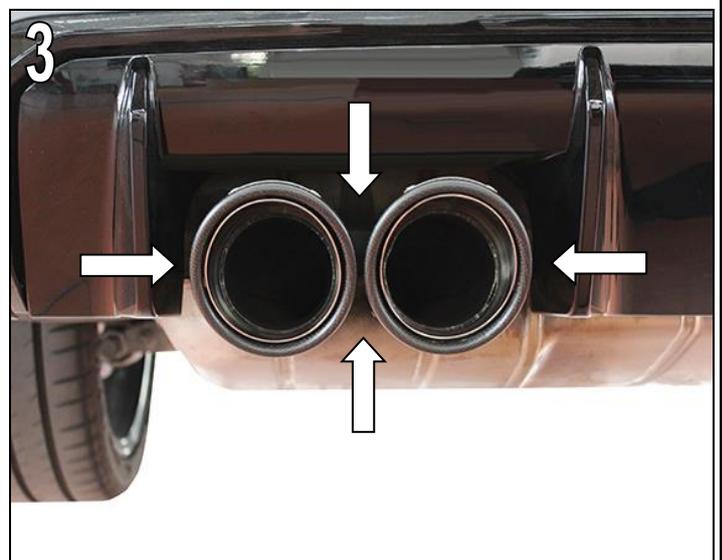


Fig. 3

Align AC Schnitzer Carbon sport tailpipe trims in the cut-out of the rear skirt.

AC Schnitzer Tailpipe Trim Carbon Sport G82-G83 / G80-G81 / G87

Fitting ...

Fig. 4

AC Schnitzer Carbon sport end trims align in length.

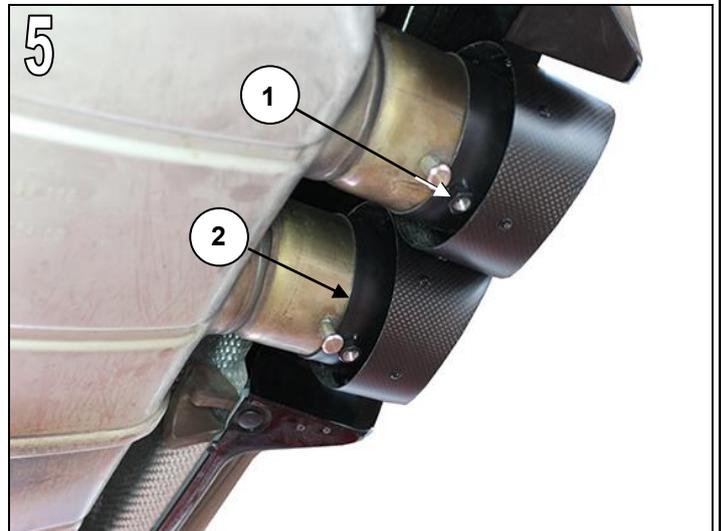


Fig. 5

Tighten the AC Schnitzer carbon sport tailpipe trims with the fixing grub screw (1).

Secure the AC Schnitzer Carbon sport tailpipe trims at the transitions with sufficient spot welds (2).

Seal all welding points with heat-resistant black matt paint..



Errors excepted, subject to change and technical development reserved !

...further AC Schnitzer Products

AC Schnitzer Front Splitter 5111 382 510



AC
SCHNITZER