

**ATC<sup>®</sup>**  
**SCHNITZER**

**-Montageanleitung-**  
**Carbon**  
**Frontspoiler Elemente**  
**– 8er (G14-G15-G16) –**



**Teile-Nr.: 5111 315 510**

**(english version see page 7)**

## AC Schnitzer Carbon Frontspoiler Elemente – 8er (G14-G15-G16) –

### Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt. Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge, bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montagehinweisen vorzugehen.

Als Hersteller sind wir verpflichtet darauf hinzuweisen, dass jegliche Veränderungen, die Sie am für den öffentlichen Verkehr zugelassenen Fahrzeug vornehmen, der Abnahme durch eine Prüfstelle und Eintragung in die Fahrzeugpapiere bedarf ! Da die gesetzlichen Bestimmungen von Land zu Land variieren können, bitten wir Sie sich bei den zuständigen Behörden zu erkundigen.

### Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille).

**Bauteile und Flächen die miteinander verklebt werden, müssen grundsätzlich mit Reiniger gesäubert werden ! Trocknungszeit des Klebers ca. 24 Stunden. Waschanlagenfest nach ca. 48 Stunden.**

### Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **12 AW**, die je nach Zustand und Ausstattung des Fahrzeugs abweichen kann.

### Benötigte Werkzeuge

Klebeband

## AC Schnitzer Carbon Frontspoiler Elemente – 8er (G14-G15-G16) –

A




- A AC Schnitzer Carbon Frontspoiler Elemente
- B AC Schnitzer Vitro Aufkleber - schwarz -
- C Kleber 80ml inkl. Reiniger
- D TÜV Gutachten online

## AC Schnitzer Carbon Frontspoiler Elemente – 8er (G14-G15-G16) –

### Montage der AC Schnitzer Carbon Frontspoiler Elemente


Klebbereich an der Frontschürze mit einem weichen Reinigungstuch und Reiniger reinigen. Klebefläche muss trocken, Schmutz und Fettfrei sein.

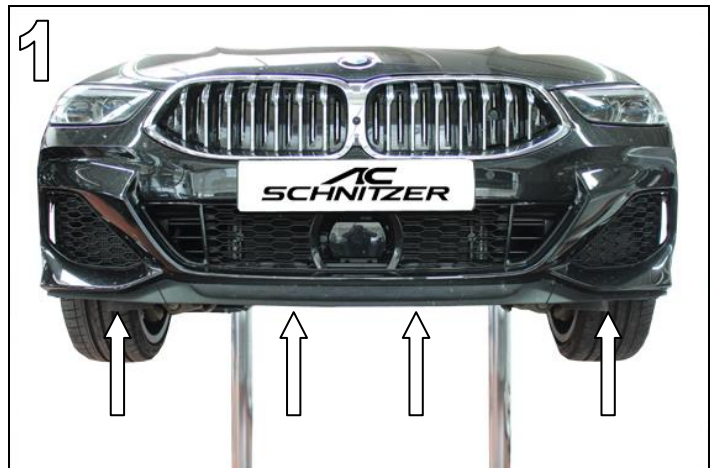

#### Abb. 1

Serienmäßige Kunststofflippe des Frontschürze demontieren.

Dazu alle 13 Befestigungsschrauben lösen und alle Befestigungsclips aus der Frontschürze entfernen.  
(werden nicht wiederverwendet)

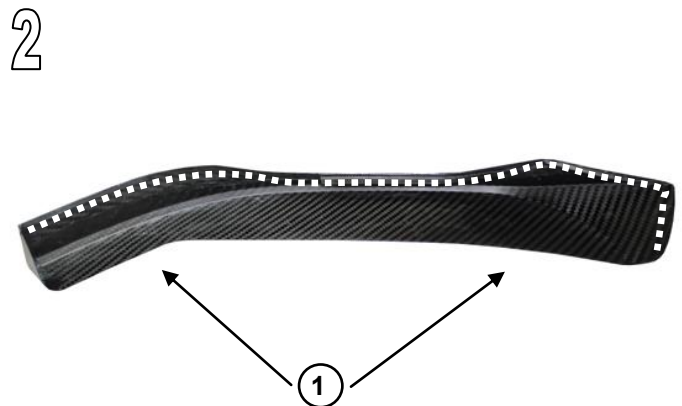

#### Abb. 2 & 3

Klebenut (1) der AC Schnitzer Carbon Frontspoiler Elemente von Lack- und Grundierungsresten befreien, anschleifen und mit dem mitgelieferten Reiniger säubern.



## AC Schnitzer Carbon Frontspoiler Elemente – 8er (G14-G15-G16) –

Montage ... ( Fortsetzung )


### Abb. 4

Mitgelieferten Kleber in Form einer Kleberraupe mit  $\varnothing$  5mm auf die Klebenut der AC Schnitzer Carbon Frontspoiler Elemente auftragen.



### Abb. 5

AC Schnitzer Carbon Frontspoiler Elemente an der Frontschürze ansetzen und ausrichten.

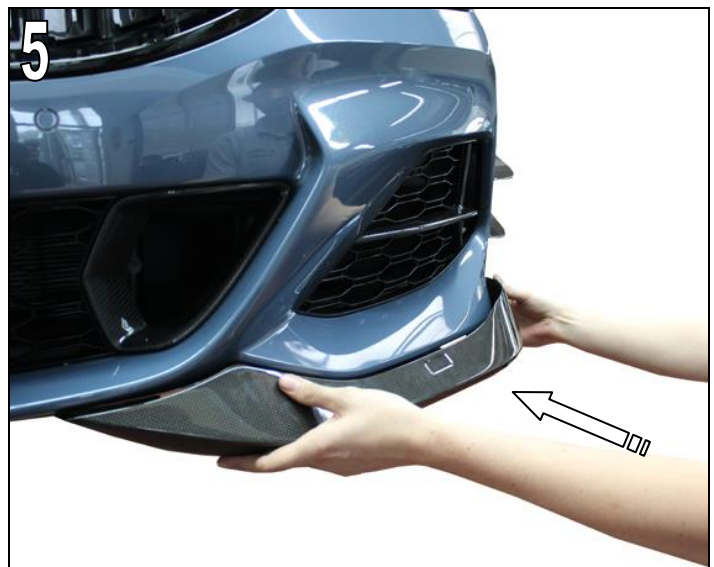

### Abb. 6

AC Schnitzer Carbon Frontspoiler Elemente mit Klebeband fixieren.

Ggf. Rebounds oder AC Schnitzer Montagehilfen verwenden.



## AC Schnitzer Carbon Frontspoiler Elemente – 8er (G14-G15-G16) –

Montage ... ( Fortsetzung )

### Abb. 7 & 8

Beim Ausrichten der AC Schnitzer Carbon Frontspoiler Elemente auf den Konturenverlauf der Elemente achten.

AC Schnitzer Carbon Frontspoiler Elemente **ca. 2mm** unterhalb der Serienfrontschürzenkontur kleben.

AC Schnitzer Carbon Frontspoiler Elemente fest andrücken und mit Klebeband fixieren.


Evtl. an den Anlageflächen herausquellenden Kleber mit Hilfe des mitgelieferten Reinigers entfernen.

**Trocknungszeit des Klebers ca. 24 Stunden.**  
**Waschanlagenfest nach ca. 48 Stunden.**

### Abb. 9

Mitgelieferten AC Schnitzer Vitro Aufkleber in die dafür vorgesehene Aussparung einkleben.

Irrtum, Änderungen sowie technische Weiterentwicklung vorbehalten !

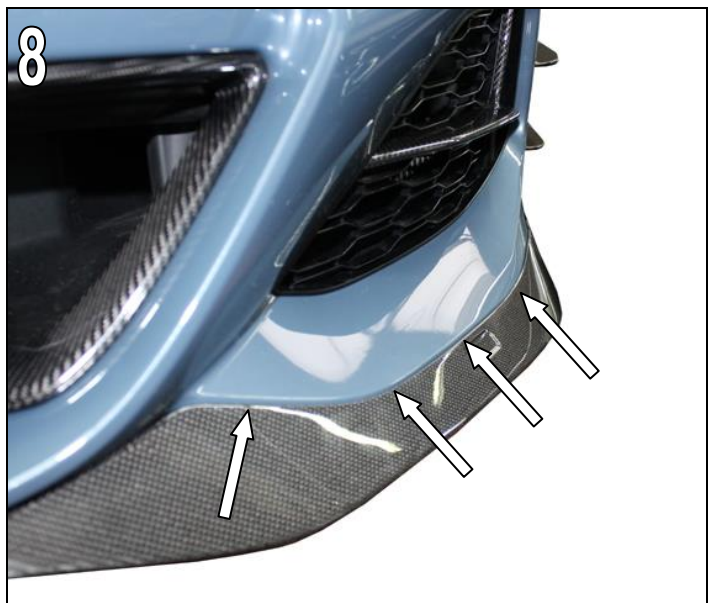

**ATC<sup>®</sup>**  
**SCHNITZER**

**-Fitting Instructions-**

**Carbon Front Spoiler  
Elements**

**-8-series (G14-G15-G16)-**



***Part No. 5111 315 510***

# General Notes !



## AC Schnitzer Carbon Front Spoiler Elements – 8-series (G14-G15-G16) –

### Important Notes !

These Fitting Instructions must be read in full before beginning installation work. AC Schnitzer bears no liability for damage caused by incorrect installation !

These Fitting Instructions are intended solely for use by authorised AC Schnitzer dealers. These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge.

All diagrams show LHD vehicles, for RHD vehicles proceed accordingly or follow separate Fitting Instructions.

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test centre and registration in the vehicle documents. As the legal regulations may vary according to location, please contact the competent authorities for information.

### Fitting

Carry out all work in accordance with applicable safety regulations (e.g. wear safety goggles).

**Components and surfaces to be glued together must first be thoroughly cleaned with cleaner !**

**The adhesive drying time is 24 hours. The vehicle can be washed in a car wash after approx. 48 hours.**

### Fitting Time (1 unit = 5 minutes)

The fitting time is around **12 units**, which may vary depending on vehicle condition and equipment level.

### Tools Required

Adhesive tape



# Components Supplied

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Front Spoiler Elements – 8-series (G14-G15-G16) –

A



- A AC Schnitzer Carbon Front Spoiler Elements
- B AC Schnitzer sticker – black –
- C Adhesive 80ml, inc. cleaner
- D TÜV certificate online

Fitting Instructions No.: 5111 315 510 / Issue: 30.06.2020 / TSch / REV01

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

# Fitting Instructions

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Front Spoiler Elements – 8-series (G14-G15-G16) –


### Fitting the AC Schnitzer Carbon Front Spoiler Elements

Clean contact area on the front skirt using cleaner and a soft cleaning cloth. The contact surface must be dry, free from dirt and grease.


#### Fig. 1

Remove the standard plastic lip of the front skirt.

Loosen all 13 fixing screws and remove all fastening clips from the front skirt. (will not be reused)

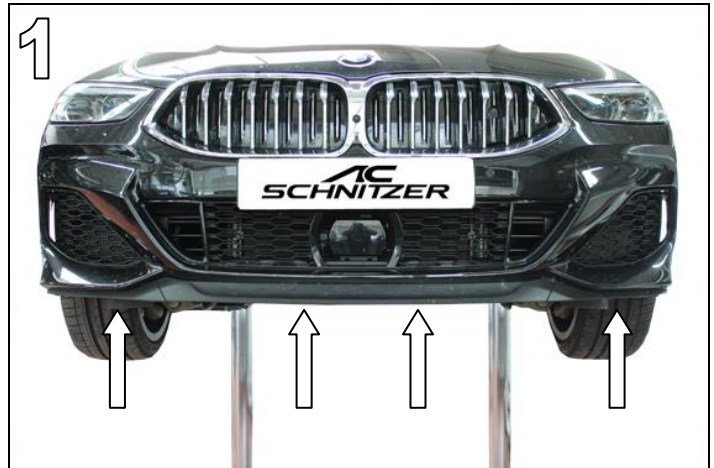

2

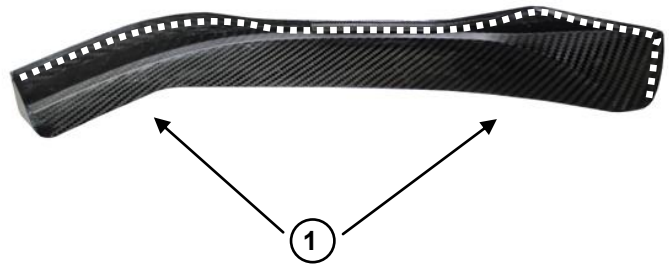

#### Figs. 2 & 3

Before fitting, remove paint and primer residue from the adhesive groove (1) on the AC Schnitzer carbon front spoiler elements, sand down and clean using the cleaner supplied.



# Fitting Instructions

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Front Spoiler Elements – 8-series (G14-G15-G16) –

Fitting .... (cont'd.)

**Fig. 4**

Apply the adhesive supplied as a 5mm bead along the adhesive groove of the AC Schnitzer carbon front spoiler elements.



**Fig. 5**

Place AC Schnitzer carbon front spoiler elements on the front skirt and align.



**Fig. 6**

Affix AC Schnitzer carbon front spoiler elements with adhesive tape. If necessary, use rebounds or AC Schnitzer mounting aids.



# Fitting Instructions

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Front Spoiler Elements – 8-series (G14-G15-G16) –

Fitting .... (cont'd.)

### Figs. 7 & 8

When aligning the AC Schnitzer carbon front spoiler elements, check the contour fit of the elements.

Glue the AC Schnitzer carbon front spoiler elements approx. 2mm below the standard front skirt contour.


Press the AC Schnitzer carbon front spoiler elements firmly and affix using adhesive tape.

Remove any surplus adhesive using the cleaner supplied.

The adhesive drying time is 24 hours.  
The vehicle can be washed in a car wash after approx. 48 hours.

### Fig. 9

Affix the AC Schnitzer sticker supplied in the recess provided.

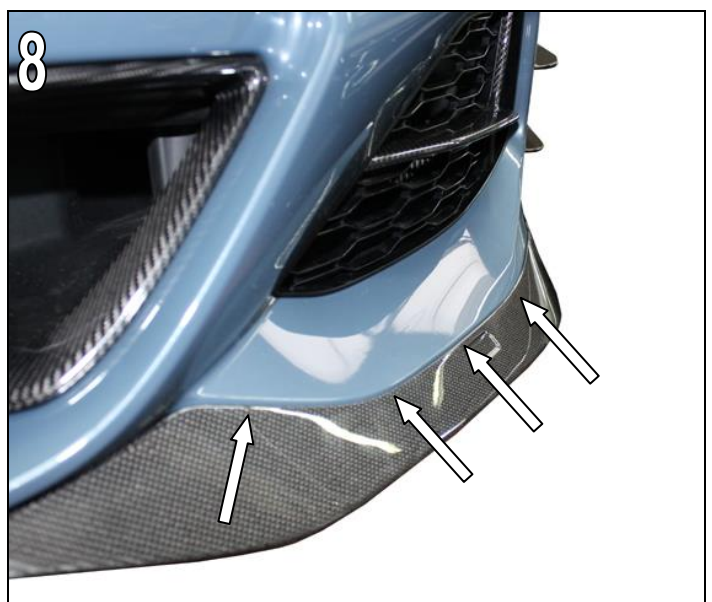

Subject to errors, modifications and technical development !

Fitting Instructions No.: 5111 315 510 / Issue: 30.06.2020 / TSch / REV01

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130