

AC SCHNITZER

-Montageanleitung-

Dekor-Set Seite

- MINI F66 / F65 / F67 / J01 -



5114 266 3204 /-3208

(englisch version see page 11)

Allgemeine Hinweise !



AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW / MINI Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Die Verklebung der AC Schnitzer Designstreifen soll bei Untergrund- und Umgebungstemperaturen von 18°C bis 25°C erfolgen.

Bei Temperaturen unter 18°C tritt nur eine bedingte Haftung des Klebers ein. Deshalb muss die untere Temperaturgrenze von 18°C unbedingt eingehalten werden.

Montage

Dekor-Set wird mit Übertragungsfolie geliefert und werden trocken verklebt.

Fahrzeug Oberwäsche durchführen, wobei keine rückfettenden Mittel verwendet werden dürfen.
Falls vorhanden und notwendig, Seriedesignstreifen zuvor entfernen.

Unmittelbar vor der Verklebung die zu beklebenden Stellen mit Silikonentferner abwaschen, damit Silikon-, Fett und Ölrückstände sicher entfernt werden.

Um eine ausreichende Verklebung zwischen der Folie und dem Fahrzeug zu erreichen, darf das Fahrzeug **24 Stunden** nach dem Aufbringen der Designstreifen keinem kalten oder nassen Klima ausgesetzt werden.
Auf keinen Fall darf der AC Schnitzer Designstreifen mit Lackpolitur oder scharfen Reinigungsmitteln jeglicher Art in Kontakt kommen ! Bitte informieren Sie Ihren Kunden eingehend.

Waschanlagenbetrieb erst nach **72 Stunden** zulässig !

Einbauzeit (1 AW = 5 Minuten)


Die Einbauzeit beträgt **10 AW** Das Entfernen eines Seriedesignstreifens ist in der Einbauzeit nicht eingerechnet.

Erforderliches Werkzeug

Cuttermesser
weiches Putztuch
Silikonentferner
Klebeband

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

A

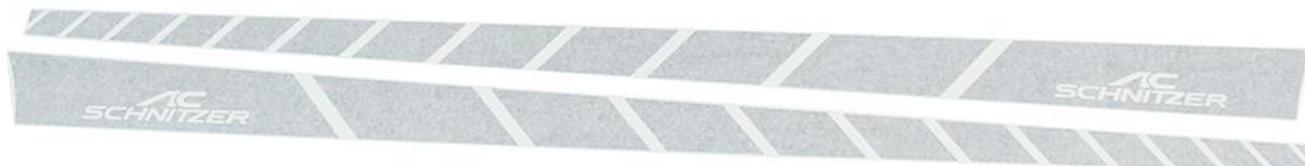

A AC Schnitzer Dekor-Set Seite (5114 266 3204 rot / 5114 266 3208 schwarz)

B Rakel mit Filzlippe

Montageanleitung

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage des AC Schnitzer Dekor-Set Seite



Die Lackoberflächen müssen frei von
Silikon, Politur und Fettrückständen sein.
Montagehinweise auf Seite 2 beachten !

Kleben des Dekorstreifens:

➔ Darstellung in Fahrtrichtung rechte Seite



Abb. 1 & 2

Klebeband unterhalb der Seitenlinienkontur des Fahrzeugs, parallel zum Seitenschweller, kleben.


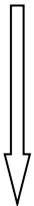


Abb. 3

Kontrollmaß:

Von der unteren Kante der Seitenwand bzw. der Tür, nach oben gemessen, **45mm**.

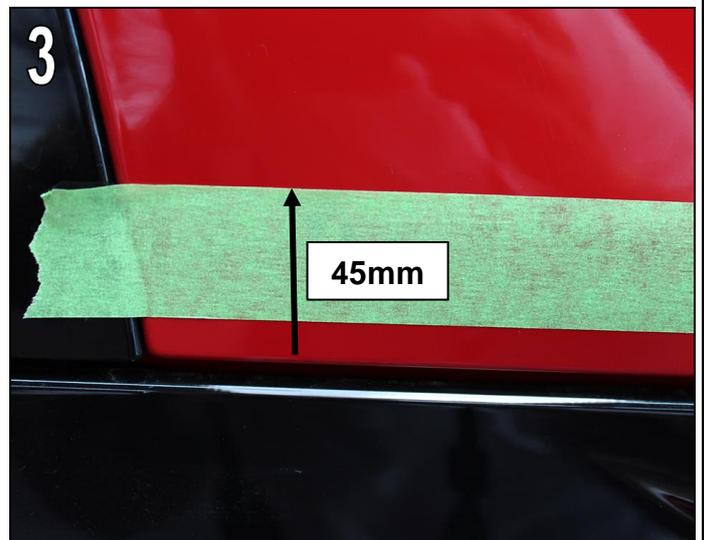

Montageanleitung

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage ...

Abb. 4 F66 – F67

AC Schnitzer Dekorstreifen, wie abgebildet am Radlauf leicht überlappt, mit der unteren Kante der Trägerfolie, entlang des Abdeckbands anlegen und fixieren.



Abb. 5 J01

AC Schnitzer Dekorstreifen, wie abgebildet mit der vorderen Ecke zur Seitenwandkante, sowie mit der unteren Kante der Trägerfolie, entlang des Abdeckbands anlegen und fixieren.



Abb. 6 F65

AC Schnitzer Dekorstreifen, wie abgebildet bündig am Radlauf, mit der unteren Kante der Trägerfolie, entlang des Abdeckbands anlegen und fixieren.








Montageanleitung

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage ...

Abb. 7 bis 9

AC Schnitzer Dekorstreifen ausrichten / vermitteln, so dass Türübergänge sich ausreichend im Dekorstreifen befinden.

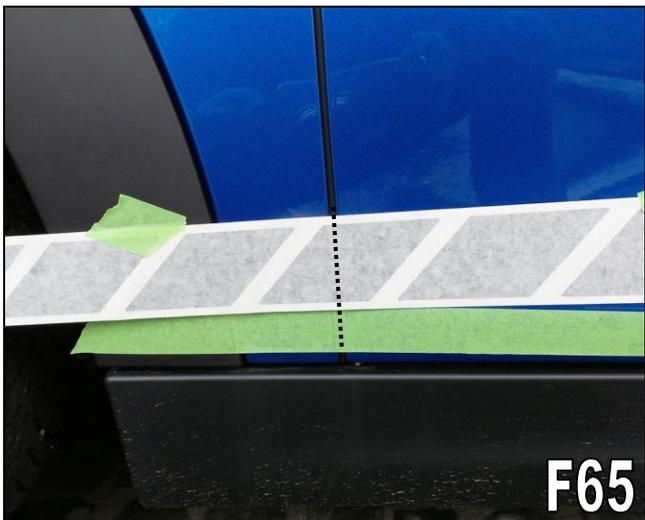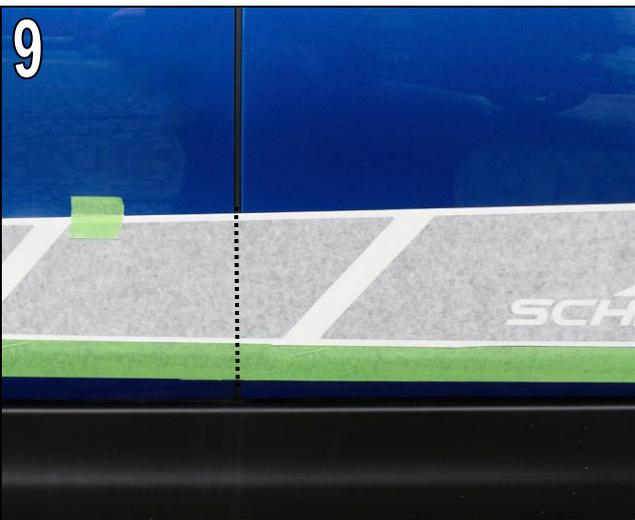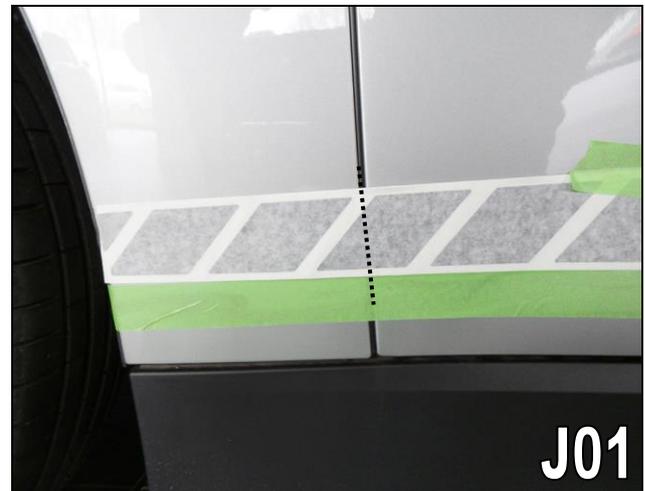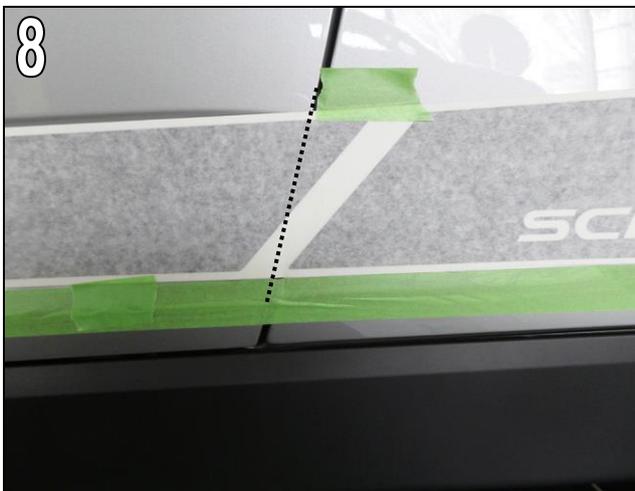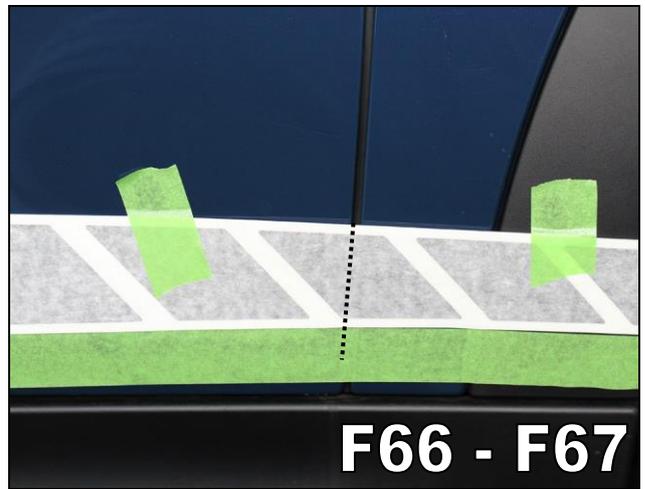

Montageanleitung

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage ...

Abb. 10

Trägerfolie des AC Schnitzer Dekorstreifen Stück für Stück vom AC Schnitzer Dekorstreifen abziehen und wie abgebildet, mit der unteren Kante der Schutzfolie entlang des Abdeckbands anlegen



Abb. 11

Mit der Filzseite des mitgelieferten Kunststoffilz Rakel den AC Schnitzer Dekorstreifen am Fahrzeug andrücken.

Hinweis !

**Nur nach oben und unten andrücken.
Nicht in Längsrichtung.**

Bei übermäßigem Druck auf das Rakel kann sich der AC Schnitzer Dekorstreifen überdehnen.



Abb. 12

Schutzfolie des AC Schnitzer Dekorstreifen Stück für Stück vorsichtig nach unten wegziehen.



Montageanleitung

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage ...



Abb. 13 & 14

Am hinteren Radlauf und in den Türspalten den AC Schnitzer Dekorstreifen mit einem Cuttermesser vorsichtig zuschneiden und überschüssiger Dekorstreifen entfernen.

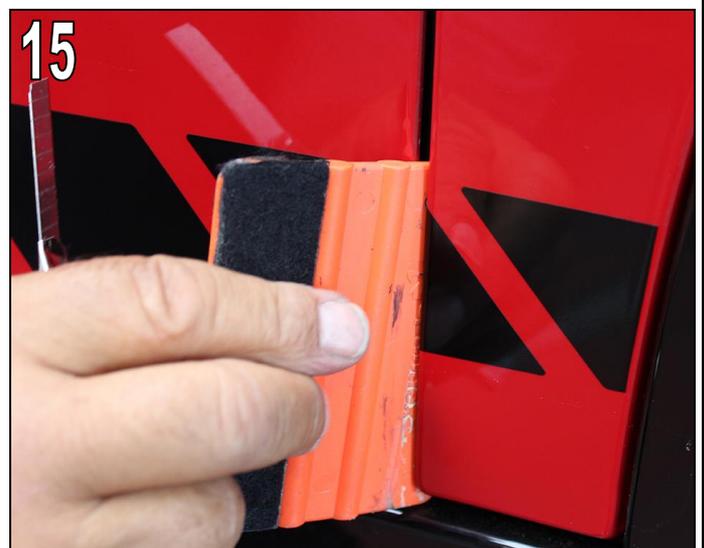


Abb. 15

Mit dem Kunststofffilz Rakel den AC Schnitzer Dekorstreifen, wie abgebildet, an den Kanten vorsichtig umkleben.

AC Schnitzer Dekor-Set Seite MINI F66 / F65 / F67 / J01

Montage ...



Abb. 16 & 17

Fertige Kanten.



Um eine ausreichende Verklebung zwischen der Folie und dem Fahrzeug zu erreichen, darf das Fahrzeug **24 Stunden** nach dem Aufbringen des Designstreifens keinem kalten oder nassen Klima ausgesetzt werden.

Waschanlagenbetrieb nach **72 Stunden** zulässig !

Irrtum, Änderung sowie technische Weiterentwicklung vorbehalten !

AC
SCHNITZER

AC SCHNITZER

-Fitting Instructions-

Dekor Set Side

- MINI F66 / F65 / F67 / J01 -



5114 266 3204 /-3208

General Notes !



AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Important Notes !

These fitting instructions must be read before fitting. AC Schnitzer accepts no liability for damage caused by incorrect fitting !

The target group for these fitting instructions is in any case specialist personnel trained on BMW / MINI vehicles with the appropriate expertise.

The AC Schnitzer design strips should be applied at substrate and ambient temperatures of 18°C to 25°C.

At temperatures below 18°C, adhesion of the adhesive is limited. Therefore, the lower temperature limit of 18°C must be strictly adhered to.

Fitting

Decor set is supplied with transfer foil and is dry-glued.

Carry out a top wash of the vehicle without using any moisturising agents. If present and necessary, remove the series design strips beforehand.

Immediately before bonding, wash the areas to be bonded with silicone remover to ensure that silicone, grease and oil residues are safely removed.

In order to achieve sufficient adhesion between the film and the vehicle, the vehicle must not be exposed to must not be exposed to cold or wet weather for **24 hours** after application of the design strips.

Under no circumstances should the AC Schnitzer design stripes come into contact with paint polish or harsh cleaning agents of any kind! Please inform your customer in detail.

Car wash operation only permitted after **72 hours** !

Fitting time (1 unit = 5 minutes)

The fitting time is **10 unit**.

The removal of a series design strip is not included in the fitting time.

Required tools

Cutter knife
Soft cleaning cloth
Silikon remover or similar
Masking tape

Components Supplied



AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

A



A AC Schnitzer Dekor Set Side (5114 266 3204 red / 5114 266 3208 black)

B Squeegee with felt lip

Fitting Instructions No: 5114 266 3204-3208 / Issue: 20.02.2025 / TSch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

Fitting Instructions

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting the AC Schnitzer Dekor Set Side



The painted surfaces must be free of silicone, polish and grease residues. Follow the fitting instructions on page 2 !

Gluing the decorative strip:

➡ Right-hand side in the direction of travel



Fig. 1 & 2

Stick the masking tape below the side line contour of the vehicle, parallel to the side sill.





Fig. 3

Control measured:

From the bottom edge of the side panel or door, measured upwards, **45mm**.

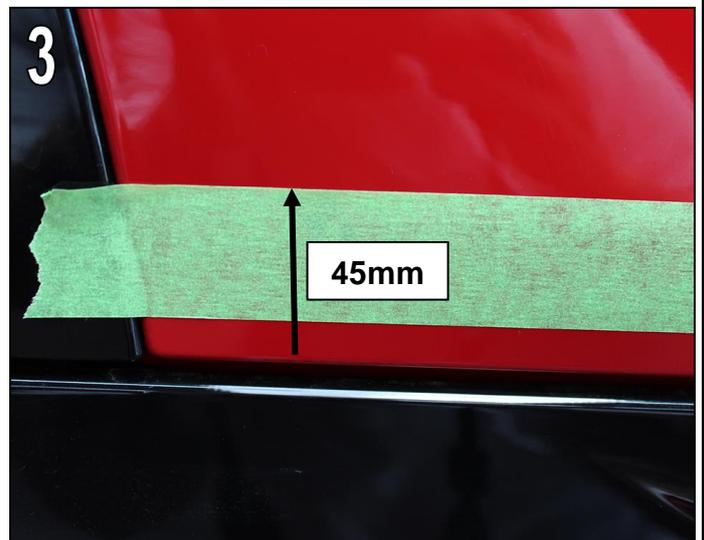

Fitting Instructions

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting ...

Fig. 4 **F66 – F67**
 AC Schnitzer decorative strips, slightly overlapped on the wheel arch as shown, with the lower edge of the backing film along the masking tape and fix in place.



Fig. 5 **J01**
 Position and fix the AC Schnitzer decorative strips along the masking tape with the front corner facing the side wall edge and the bottom edge of the backing film as shown.



Fig. 6 **F65**
 Position the AC Schnitzer decorative strips flush with the wheel arch, as shown, with the lower edge of the backing film along the masking tape and fix in place.








Fitting Instructions

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting ...

Fig. 7 unit 9

Align / arrange AC Schnitzer decorative strips so that door transitions are sufficiently in the decorative strip.

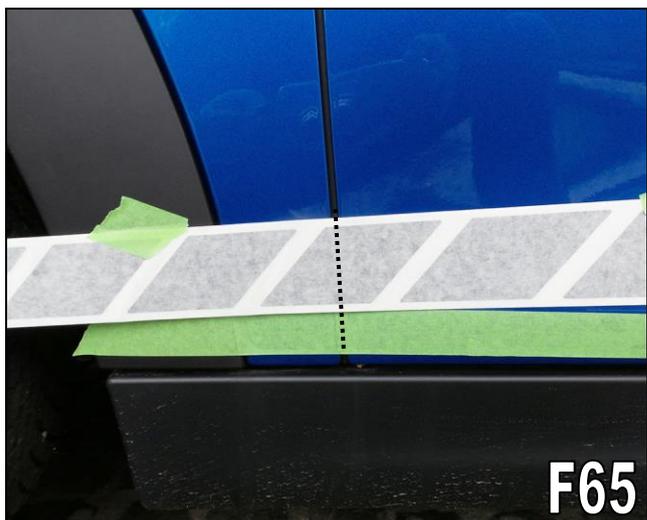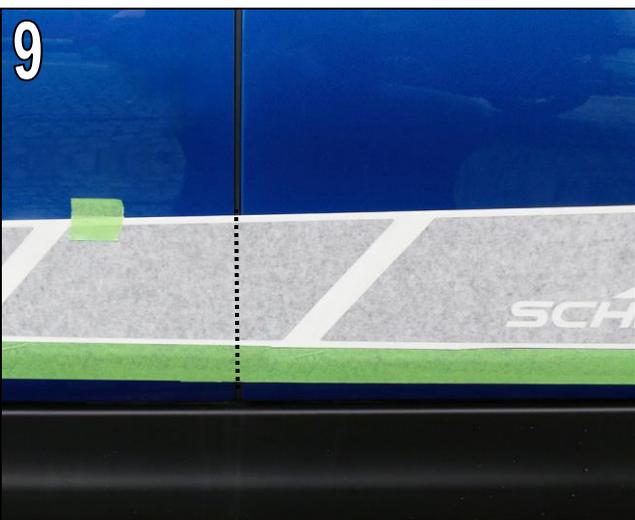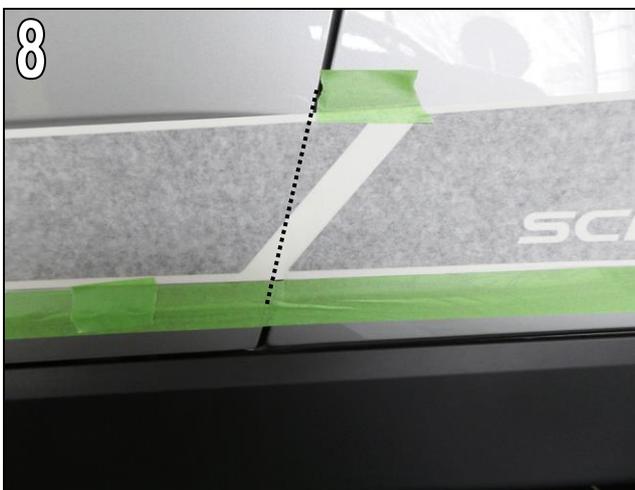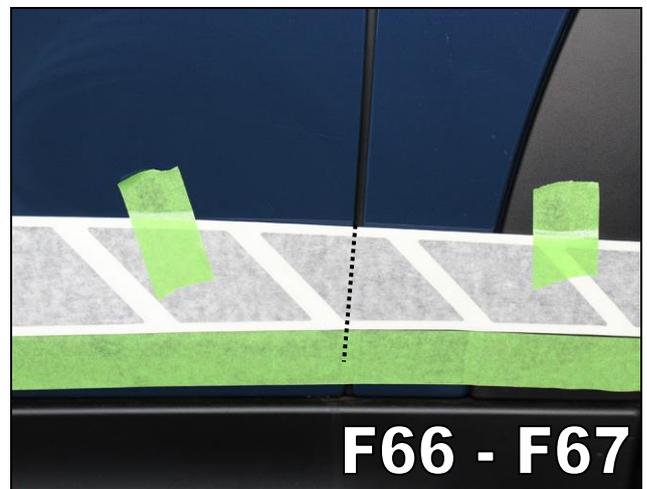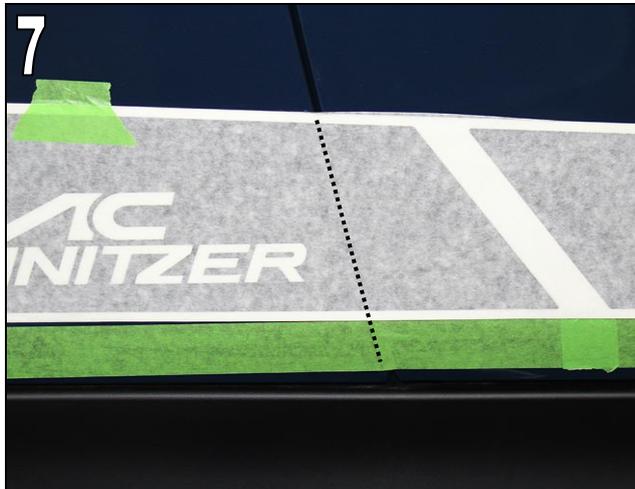

Fitting Instructions

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting ...

Fig. 10

Remove the backing film of the AC Schnitzer decorative strip piece by piece from the AC Schnitzer decorative strip and apply as shown, with the lower edge of the protective film along the masking tape



Fig. 11

Use the felt side of the plastic felt squeegee supplied to press the AC Schnitzer decorative strip onto the vehicle.

Note !

**Only press upwards and downwards.
Not lengthways.**

Excessive pressure on the squeegee can cause the AC Schnitzer decal strip to overstretch.



Fig. 12

Carefully pull the protective film of the AC Schnitzer decorative strip downwards piece by piece.



Fitting Instructions

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting ...



Fig. 13 & 14

On the rear wheel arch and in the door gaps, carefully cut the AC Schnitzer decorative strip to size with a cutter knife and remove excess decorative strip.



Fig. 15

Using the plastic felt squeegee, carefully glue around the edges of the AC Schnitzer decorative strip as shown.

Fitting Instructions

**AC
SCHNITZER**

AC Schnitzer Dekor Set Side MINI F66 / F65 / F67 / J01

Fitting ...



Fig. 16 & 17
Finished edges.



In order to achieve sufficient adhesion between the film of the decorative strip and the vehicle, the vehicle must not be exposed to cold or wet climatic conditions for **24 hours** after the decorative strip has been applied.

Car wash operation permitted after **72 hours** !

Subject to errors, modifications and further technical development !

Fitting Instructions No: 5114 266 3204-3208 / Issue: 20.02.2025 / TSch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

AC
SCHNITZER