

AC SCHNITZER

-Montageanleitung-

**Design Aufkleber Motorhaube
– 2`er (G42) / M2 (G87) –**



5114 342 110

(englisch version see page 11)

Allgemeine Hinweise!

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keinerlei Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte Fachhändler bestimmt. Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Die Verklebung der AC Schnitzer Designstreifen soll bei Untergrund- und Umgebungstemperaturen von 18°C bis 25°C erfolgen.

Bei Temperaturen unter 18°C tritt nur eine bedingt Haftung des Klebers ein. Deshalb muss die untere Temperaturgrenze von 18°C unbedingt eingehalten werden.

Montage

Der AC Schnitzer Design Aufkleber Motorhaube wird nass verklebt.

Fahrzeug Oberwäsche durchführen, wobei keine rückfettenden Mittel verwendet werden dürfen.

Unmittelbar vor der Verklebung der zu beklebende Stelle, ist diese mit geeignetem Reiniger zu reinigen. Frei von Silikon-, Fett und Schmutzrückstände.

Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **8 AW**

Erforderliches Werkzeug

Abdeckband
Reiniger
Montageflüssigkeit
weiches Putztuch
Kunststoffrakel mit Filzlippe

AC Schnitzer Design Aufkleber Motorhaube G42 / G87



B



C



A AC Schnitzer Design Aufkleber Motorhaube

B AC Schnitzer Schriftzug

C Kunststofffrakel mit Filzlippe

Montageanleitung

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage des AC Schnitzer Design Aufklebers



Die Lackoberfläche muss frei von Silikon, Politur, Schmutz und Fettrückständen sein.


Abb. 1

Klebebereich auf der Motorhaube mit geeignetem Reiniger reinigen.



Abb. 2 bis 5

Mit einem Abdeckband, innerhalb der der Motorhaubenerhöhung, die Kontur abkleben.

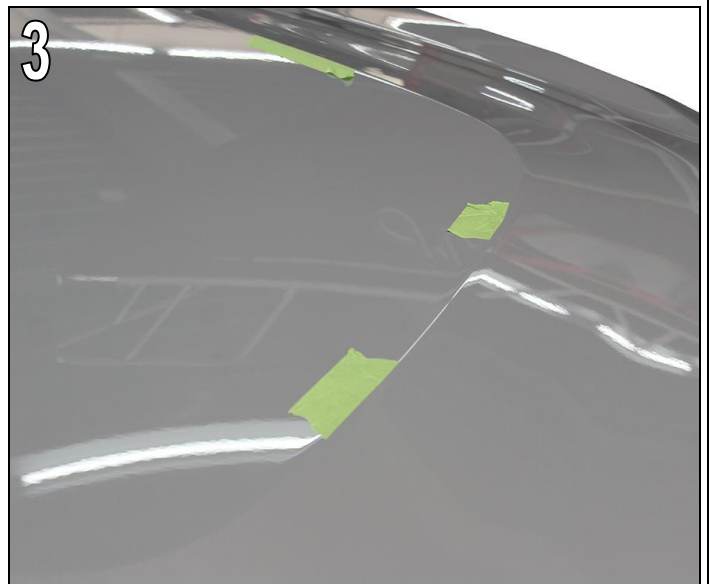

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

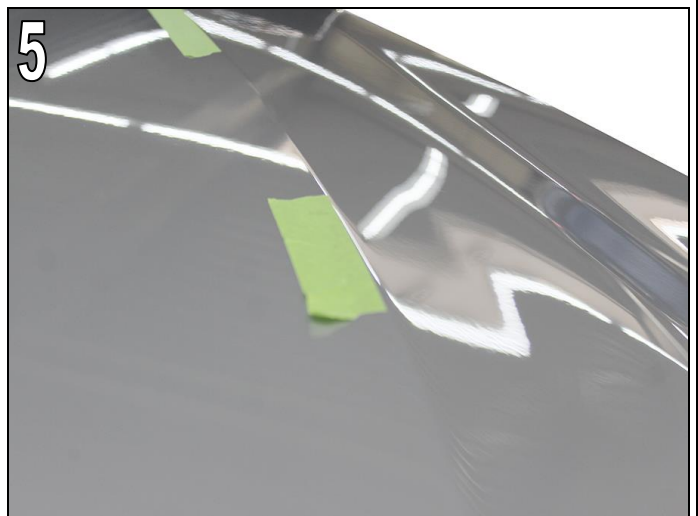
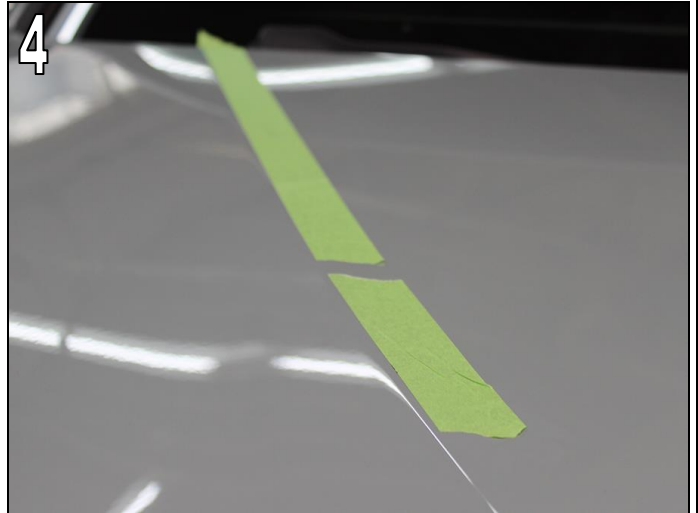


Abb. 6

AC Schnitzer Design Aufkleber entlang der Kontur auflegen und ausrichten.

Hinweis !

Seitliches Weglaufen des AC Schnitzer Aufklebers ist normal. Aufkleber wird später 3 dimensional verklebt.

Montageanleitung

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

Abb. 7

AC Schnitzer Design Aufkleber zur Mittellinie des BMW Abzeichens ausrichten.

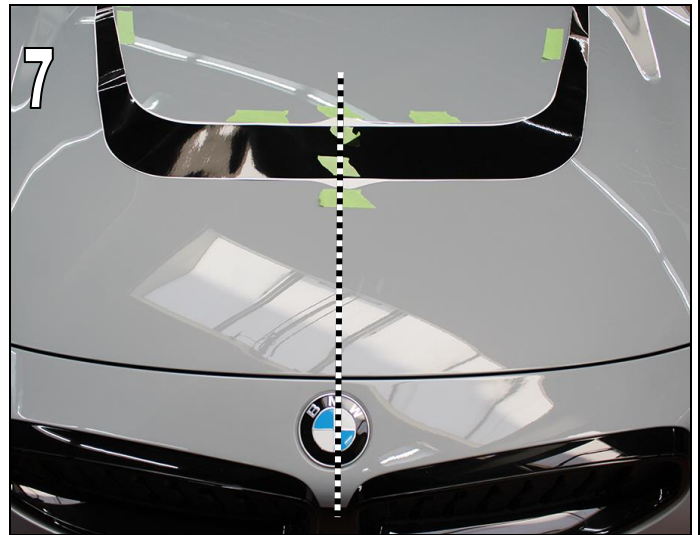


Abb. 8

Abdeckband, wie abgebildet, auf den AC Schnitzer Design Aufkleber und der Motorhaube anbringen und die Markierungsstriche des Aufklebers auf das Abdeckband übertragen.

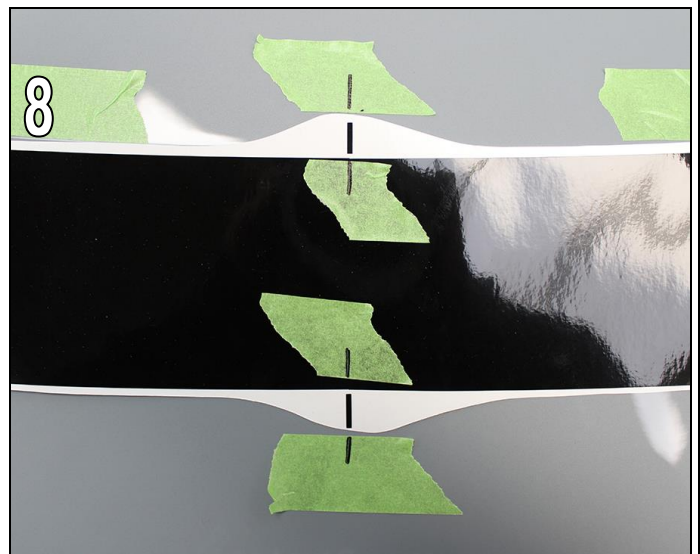


Abb. 9

Achtung !

Der AC Schnitzer Motorhaubenaufkleber wird nass verklebt !

Zur Verklebung wird eine Montageflüssigkeit benötigt. Wir empfehlen hier die Montageflüssigkeit der Firma Würth oder ähnliche.



Montageanleitung

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

Abb. 10

Kleberebereich auf der Motorhaube mit Montageflüssigkeit einsprühen.



Abb. 11

AC Schnitzer Design Aufkleber von der Trägerfolie abziehen und mit Montageflüssigkeit einsprühen.

Tipp !

Eine zweite Person zur Hilfe nehmen.



Abb. 12

AC Schnitzer Design Aufkleber mit einer Hilfsperson auf der Motorhaube auflegen und entlang dem Abdeckband ausrichten.



Montageanleitung

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

Abb. 13

AC Schnitzer Design Aufkleber an den zuvorangebrachten Markierungen, auf dem Abdeckband, ausrichten.


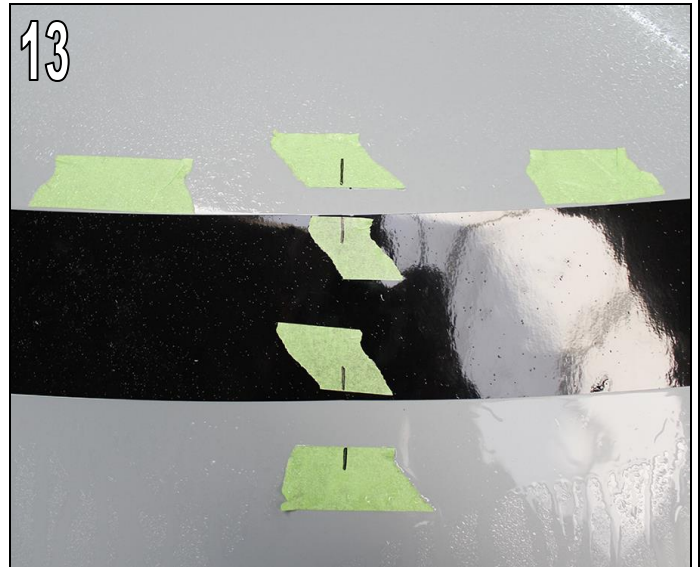


Abb. 14 & 15

Den Aufkleber seitlich der Kontur ausrichten.

AC Schnitzer Design Aufkleber mit einem weichen Tuch andrücken.

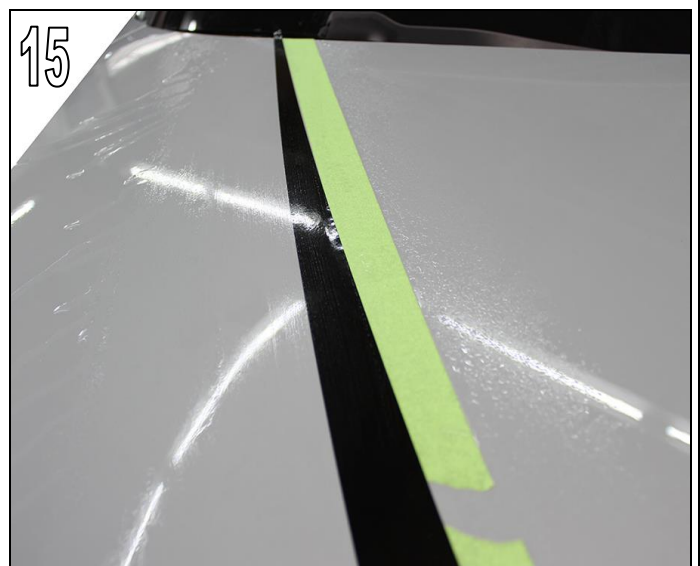

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

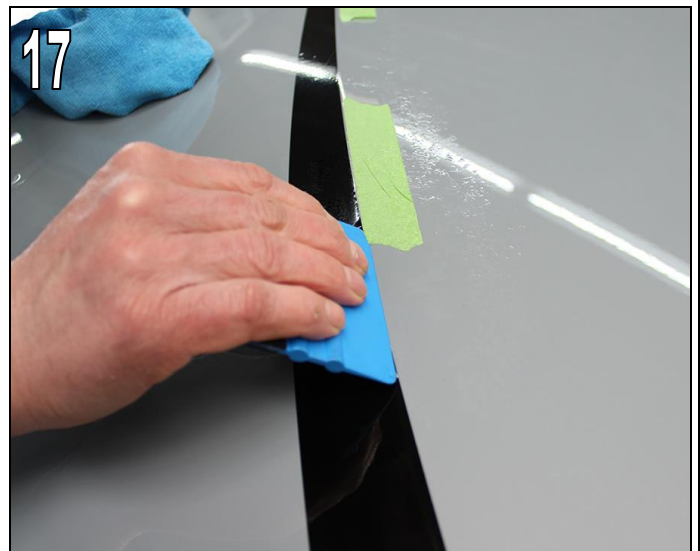


Abb. 15 bis 18

AC Schnitzer Design Aufkleber Motorhaube mit mitgelieferten Kunststoffrakel fest andrücken. Montageflüssigkeit seitlich ausstreifen und mit einem weichem Tuch trocken wischen.

Diesen Vorgang so oft wiederholen, bis keine Montageflüssigkeit mehr vorhanden ist und der Aufkleber fest verklebt ist.

Montageanleitung

AC Schnitzer Design Aufkleber Motorhaube G42 / G87

Montage ... (Fortsetzung)

Abb. 19

Die Enden des AC Schnitzer Design Aufklebers nach hinten umlegen und festkleben.


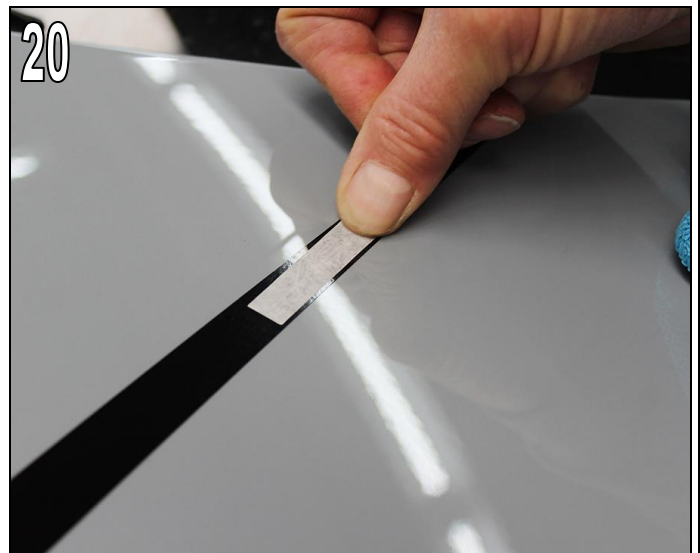


Abb. 20 & 21

Mitgelieferter AC Schnitzer Schriftzug, in Fahrtrichtung links, im hintern Bereich des AC Schnitzer Design Aufklebers anbringen.

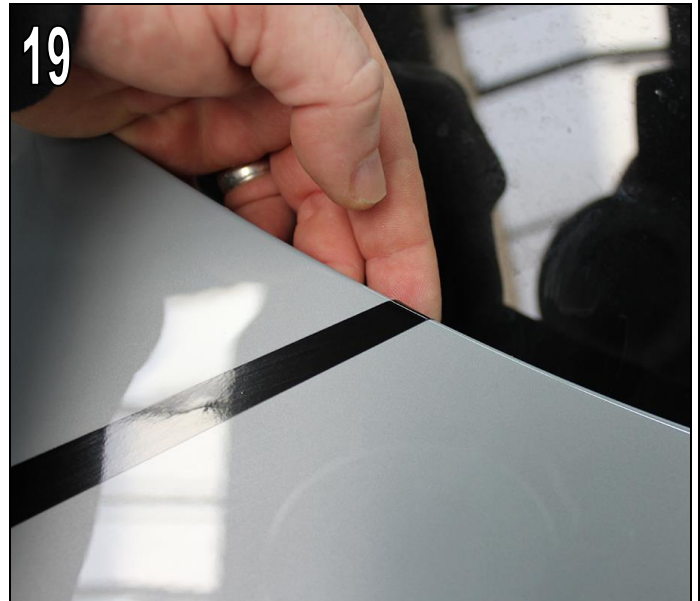

Waschanlagenfest nach 48 Stunden.

Irrtum, Änderung sowie technische Weiterentwicklung vorbehalten!

AC SCHNITZER

-Fitting Instructions-

Design Decal Hood

- 2 series (G42) / M2 (G87) -



5114 342 110

General Notes!

AC Schnitzer Design Decal Hood G42 / G87

Important Notes !

It is essential to read these installation instructions before starting installation work. AC Schnitzer accepts no liability for damage caused by improper installation !

These installation instructions are intended for use by authorized dealers. The target group for these installation instructions is always qualified personnel with appropriate expertise who have been trained on BMW vehicles.

Bonding of AC Schnitzer design strips should be carried out at substrate and ambient temperatures of 18°C to 25°C.

At temperatures below 18°C, adhesion of the adhesive is limited. Therefore, the lower temperature limit of 18°C must be strictly observed.

Fitting

The AC Schnitzer Design Decal Hood is glued wet.

Carry out a top wash on the vehicle, whereby no re-greasing agents may be used.

Clean the area to be bonded with a suitable cleaner immediately before bonding.
Free from silicone, grease and dirt residues.

Fitting Time (1 unit = 5 minutes)

The fitting time is **8 unit**

Requires Tools

Masking tape
Cleaner
Assembly liquid
Soft cleaning cloth
Plastic squeegee with felt lip

Components Supplied



AC Schnitzer Design Decal Hood G42 / G87



B



C



A AC Schnitzer Design Decal Hood

B AC Schnitzer sticker

C Plastic squeegee with felt lip

Fitting instructions No: 5114 342 110 / Issue: 14.08.2023 / TSch / REV01

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130

Fitting Instructions

AC
SCHNITZER

AC Schnitzer Design Decal Hood G42 / G87

Fitting the AC Schnitzer hood decal



The paint surface must be free of silicone, polish, dirt and grease residues.




Fig. 1

Clean the adhesive area on the engine hood with a suitable cleaner.



Fig. 2 until 5

Mask off the contour with masking tape inside the hood rise.

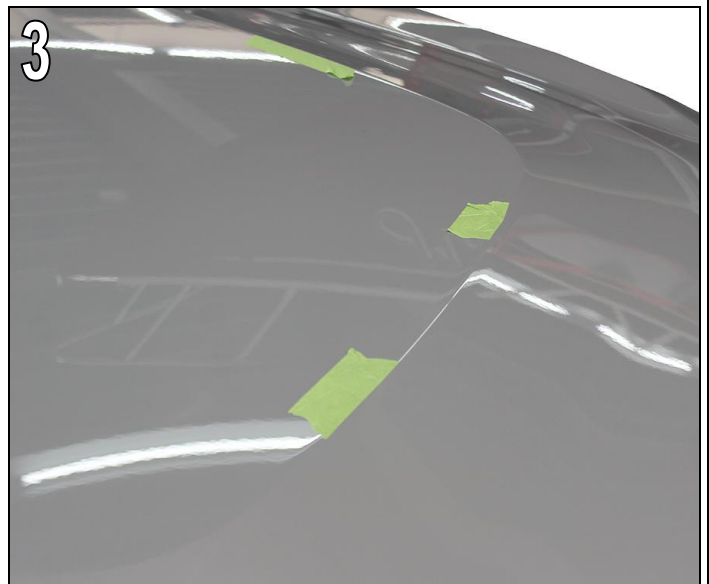

Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fitting ... (continue)

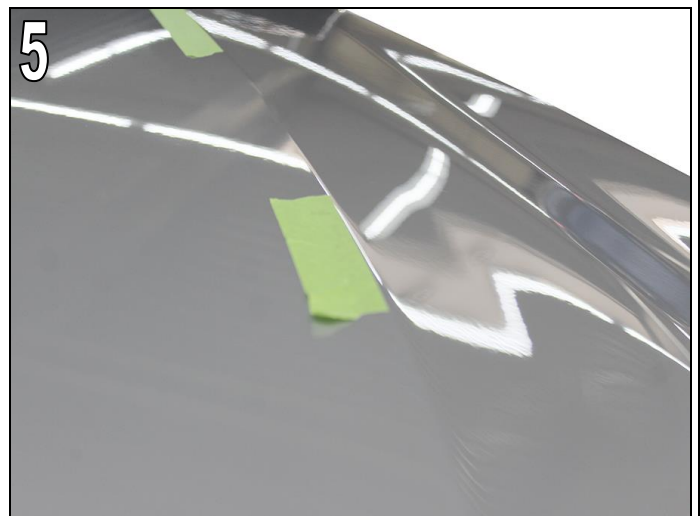
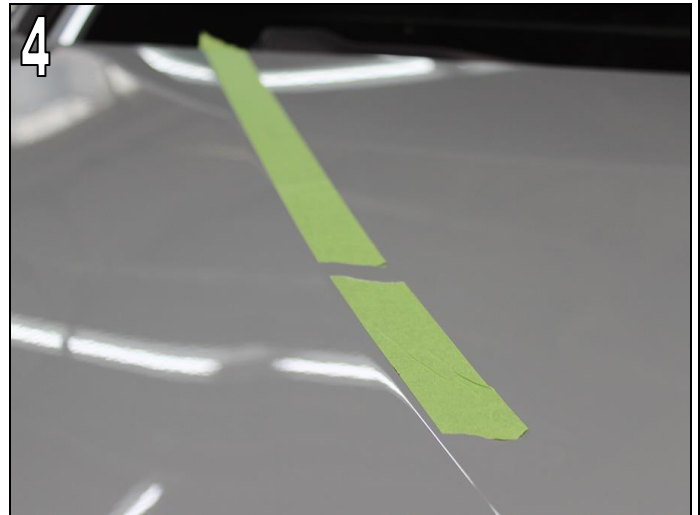


Fig. 6

Place AC Schnitzer design decal along contour and align.

Note !

Lateral running away of the AC Schnitzer decal is normal. Sticker will be glued 3 dimensional later.

Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fitting ... (continue)

Fig. 7

Align AC Schnitzer design decal to center line of BMW badge.

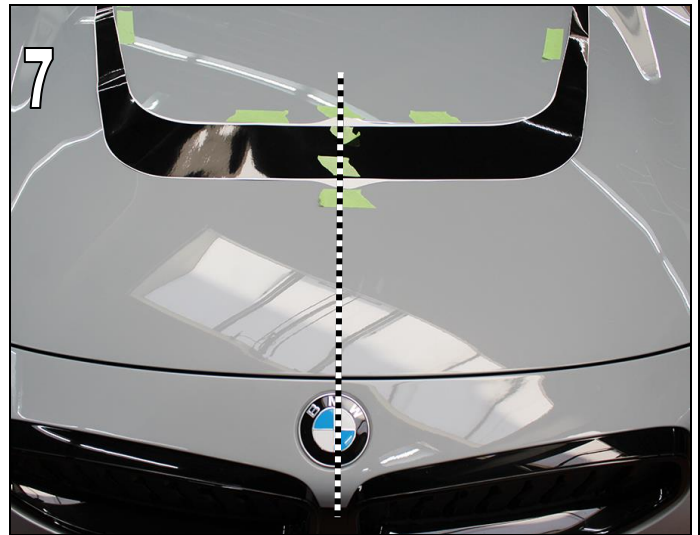


Fig. 8

Apply masking tape, as shown, to the AC Schnitzer design decal and hood and transfer the marking lines of the decal to the masking tape.

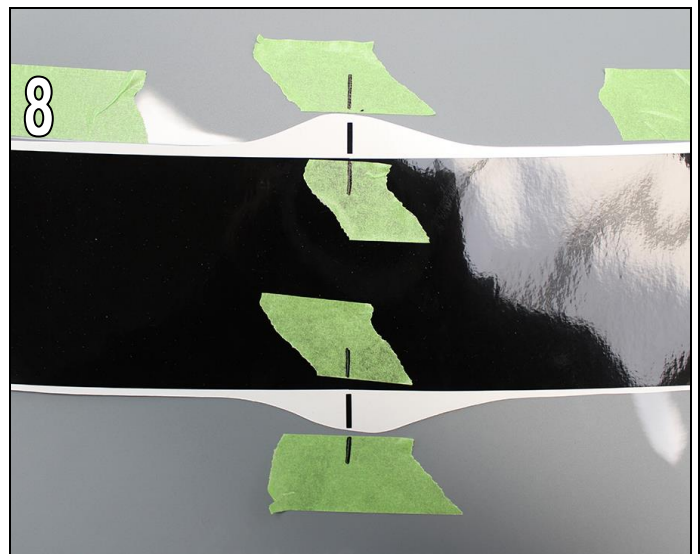


Fig. 9

Attention !

The AC Schnitzer hood sticker is wet glued !

For bonding, a mounting fluid is required.

We recommend here the assembly fluid of the company Würth or similar.



Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fitting ... (continue)

Fig. 10

Spray the bonding area on the engine hood with assembly liquid.



Fig. 11

Peel AC Schnitzer design decal from backing film and spray with fitting liquid.

Tip !

Take a second person to help.



Fig. 12

Place AC Schnitzer design decal on hood with an assistant and align along the masking tape.



Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fitting ... (continue)

Fig. 13

Align the AC Schnitzer design decal with the previously align with the markings previously made on the masking tape.


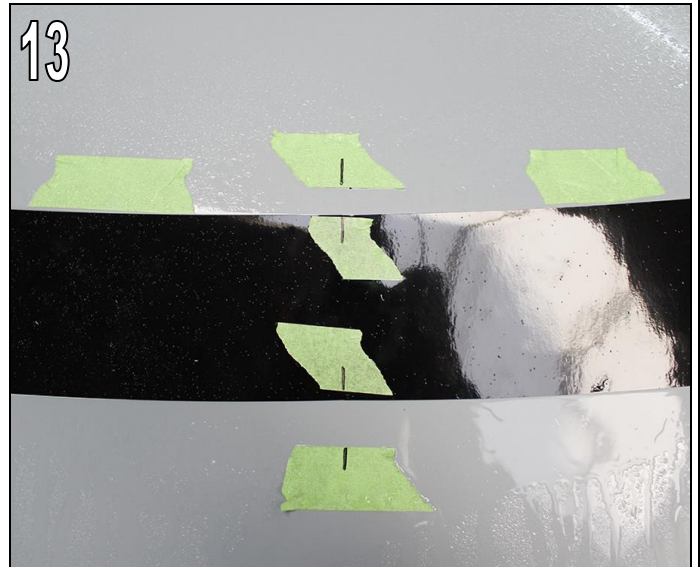


Fig. 14 & 15

Align the decal to the side of the contour.

Press on AC Schnitzer design decal with a soft cloth.

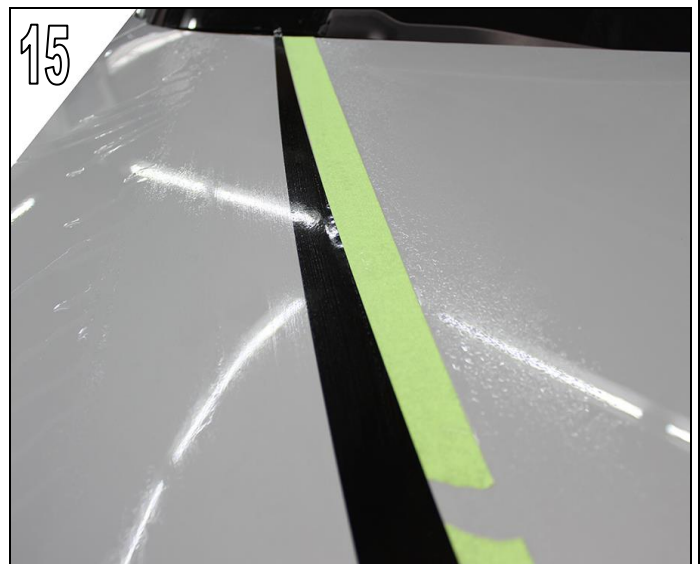

Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fiting ... (continue)

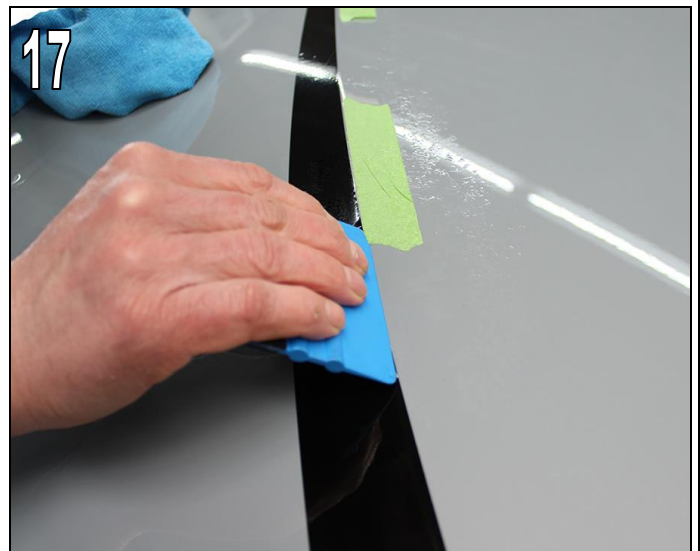


Fig. 15 until 18

Press on AC Schnitzer design decal firmly with plastic squeegee supplied. Stripe out mounting liquid to the side and wipe dry with a soft cloth.

Repeat this process until there is no more mounting liquid and the decal is firmly adhered.



Fitting Instructions

AC Schnitzer Design Decal Hood G42 / G87

Fitting ... (continue)

Fig. 19

Fold the ends of the AC Schnitzer design decal backwards and glue in place.


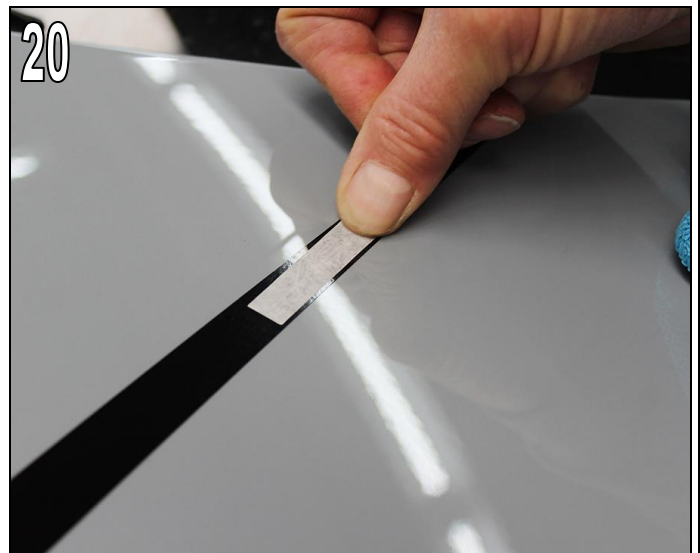


Fig. 20 & 21

Attach supplied AC Schnitzer sticker, in driving direction left, in rear area of AC Schnitzer design decal.

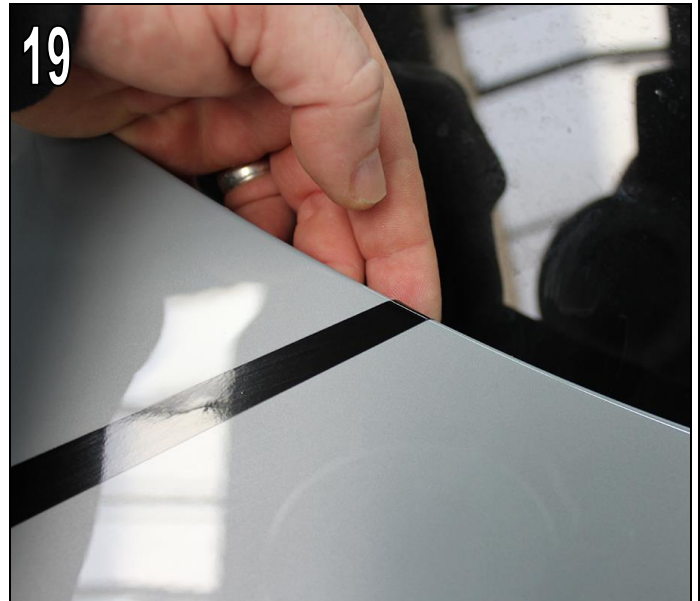

Car wash resistant after 48 hours.

Errors excepted, subject to change and technical development!