


**ATC<sup>®</sup>**  
**SCHNITZER**

**-Montageanleitung-**

**Carbon Heckspoiler**

**G22 – G82**

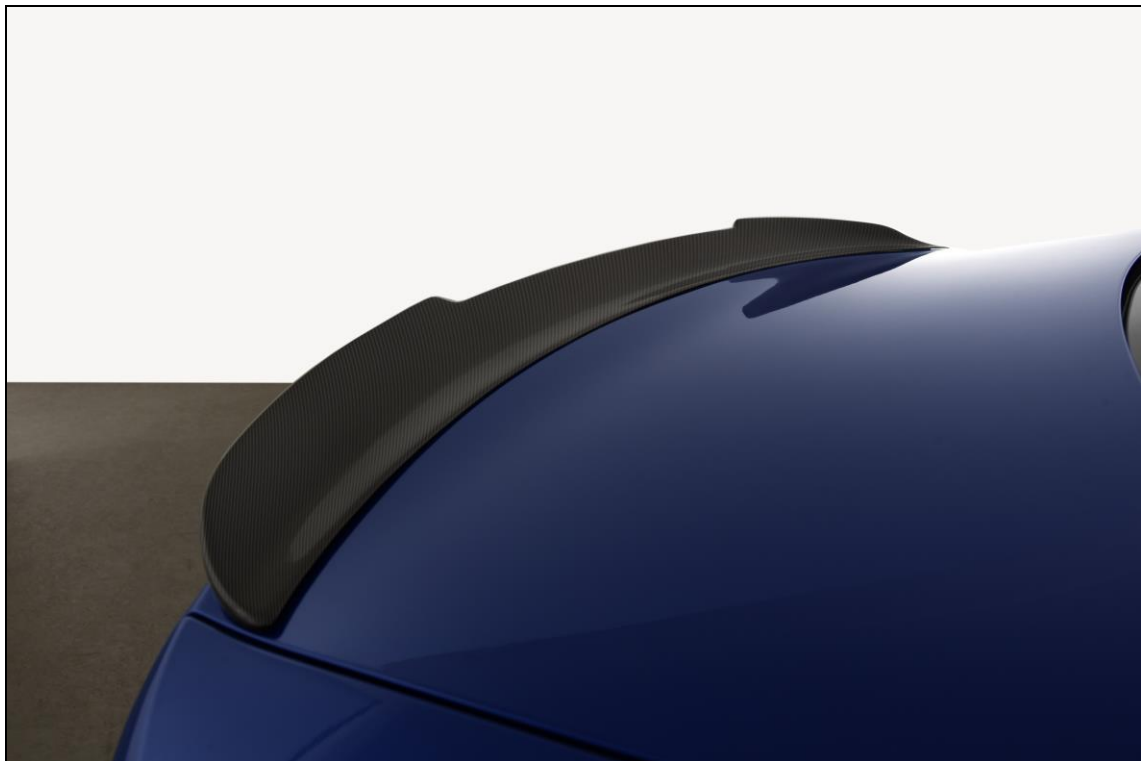

**5162 322 510**

*(english version see page 9)*

# Allgemeine Hinweise !



## AC Schnitzer Carbon Heckspoiler G22 – G82

### Wichtige Hinweise !

Diese Montageanleitung ist unbedingt vor Beginn der Einbauarbeiten zu lesen. AC Schnitzer übernimmt keine Haftung für Schäden, die durch unsachgemäßen Einbau entstehen !

Diese Montageanleitung ist zum Gebrauch durch autorisierte AC Schnitzer Händler bestimmt.

Zielgruppe dieser Montageanleitung ist in jedem Falle an BMW Fahrzeugen ausgebildetes Fachpersonal mit entsprechenden Fachkenntnissen.

Alle Abbildungen zeigen LHD Fahrzeuge, bei RHD Fahrzeugen ist sinngemäß oder nach gesonderten Montagehinweisen vorzugehen.

Als Hersteller sind wir verpflichtet darauf hinzuweisen, dass jegliche Veränderungen, die Sie am für den öffentlichen Verkehr zugelassenen Fahrzeug vornehmen, der Abnahme durch eine Prüfstelle und Eintragung in die Fahrzeugpapiere bedarf !

Da die gesetzlichen Bestimmungen von Land zu Land variieren können, bitten wir Sie sich bei den zuständigen Behörden zu erkundigen.

### Montage

Alle Arbeiten sind unter Berücksichtigung der geltenden Sicherheitsvorschriften durchzuführen (z.B. Schutzbrille). Bauteile und Flächen die miteinander verklebt werden, müssen grundsätzlich mit Reiniger gesäubert werden. Die Klebefläche des AC Schnitzer Carbon Heckspoilers sollte eine mind. Temperatur von über 20°C aufweisen.

**Trocknungszeit des Klebers ca. 24 Stunden. Waschanlagenfest nach ca. 48 Stunden.**

### Einbauzeit (1 AW = 5 Minuten)

Die Einbauzeit beträgt **8 AW**

### Erforderliches Werkzeug


Klebeband  
Weiches Reinigungstuch

# Gelieferte Bauteile

**AC**  
**SCHNITZER**

## AC Schnitzer Carbon Heckspoiler G22 – G82

A

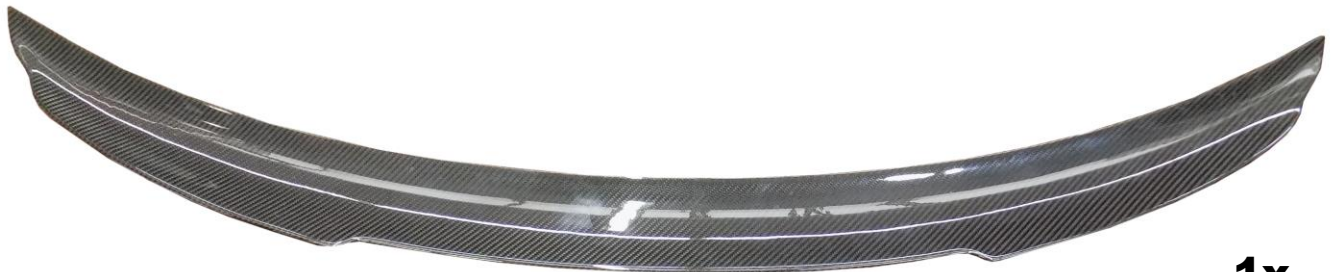

**1x**



**1x**



**1x**



**1x**

- A AC Schnitzer Carbon Heckspoiler
- B AC Schnitzer Aufkleber Vitro – schwarz –
- C AC Schnitzer Aufkleber Teilekennzeichnung
- D Kleber inkl. Reiniger

Montageanleitung Nr.: 5162 322 510 / Stand: 20.05.2021 / TSch

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 / [www.ac-schnitzer.de](http://www.ac-schnitzer.de)

## AC Schnitzer Carbon Heckspoiler G22 – G82

### Montage des AC Schnitzer Carbon Heckspoilers

Serienheckspoiler mit einem Heißluftfön **vorsichtig** erwärmen und Serienheckspoiler von der Heckklappe abziehen. Klebereste entfernen.

**Achtung:**  
Lackschäden an der Heckklappe vermeiden.

Klebebereich auf der Heckklappe mit einem weichen Reinigungstuch und mitgelieferten Reiniger reinigen. Klebefläche muss trocken, Schmutz und Fettfrei sein.



2



**Abb. 1**  
Kofferraumdeckel öffnen und von innen nach außen, wie abgebildet, einen Klebestreifen anbringen.

Kofferraumdeckel wieder schließen.

**Abb. 2 & 3**  
Klebenut des AC Schnitzer Carbon Heckspoilers von Lack- und Grundierungsresten befreien, anschleifen und mit dem mitgelieferten Reiniger säubern.





## AC Schnitzer Carbon Heckspoiler G22 – G82

Montage ... (Fortsetzung)

### Abb. 4

Mitgelieferten Kleber in Form einer Kleberraupe mit  $\varnothing$  5mm auf die Klebenut des AC Schnitzer Carbon Heckspoilers umlaufend auftragen.



### Abb. 5 & 6

AC Schnitzer Carbon Heckspoiler an die Kante der Heckklappe ansetzen und ausrichten.

Beim Ausrichten ist darauf zu achten, dass der AC Schnitzer Heckspoiler Carbon rechts und links einen gleichen Abstand aufweist und mit der Kontur an der Kofferraumkante anliegt.




## AC Schnitzer Carbon Heckspoiler G22 – G82

Montage ... (Fortsetzung)

### Abb. 7

Auf Konturenverlauf des AC Schnitzer Carbon Heckspoilers achten.

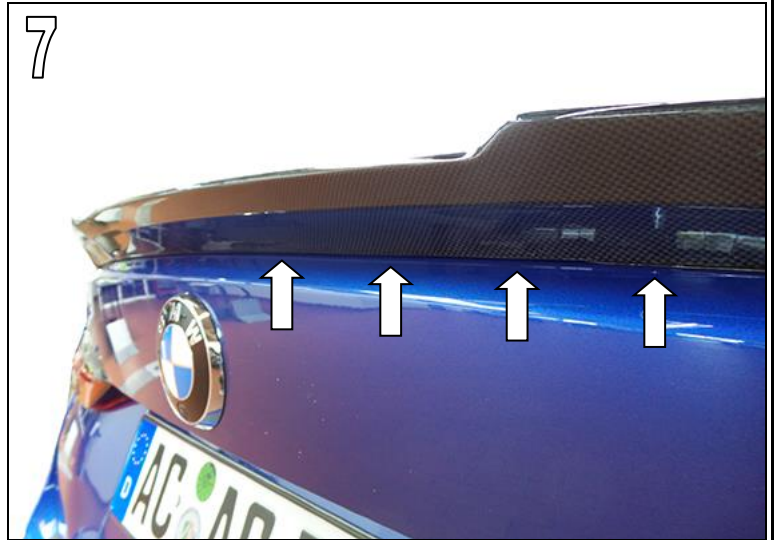

### Abb. 8

AC Schnitzer Heckspoiler mit dem zuvor angebrachten Klebeband fixieren.


Evtl. an den Klebeflächen austretenden Kleber mit dem mitgelieferten Reiniger entfernen.



### Abb. 9

AC Schnitzer Carbon Heckspoiler mit Klebeband fixieren.

Ggf. Rebounds oder AC Schnitzer Montagehilfen verwenden

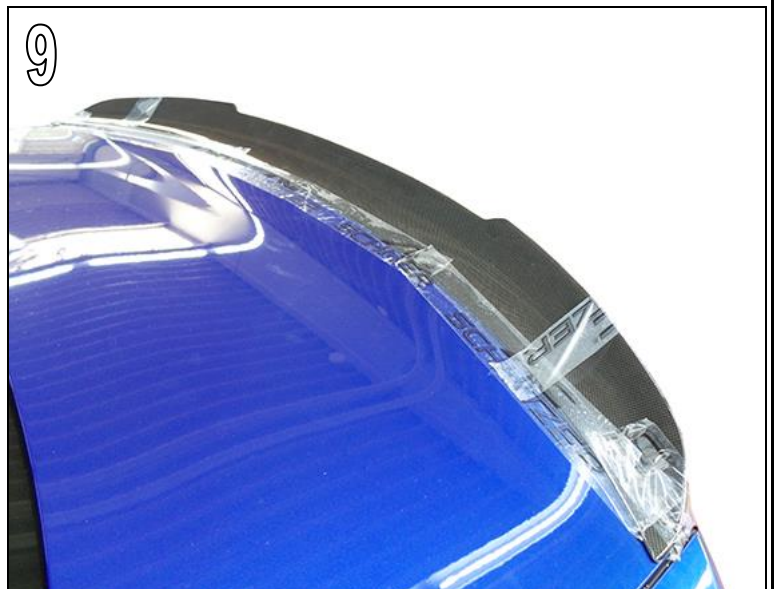

## AC Schnitzer Carbon Heckspoiler G22 – G82

Montage ... (Fortsetzung)

### Abb. 10

Mitgelieferter AC Schnitzer Vitro in die dafür vorgesehene Vertiefung einkleben.



### Abb. 11

Den mitgelieferten Aufkleber zur Teilekennzeichnung sichtbar von innen, in der Heckklappe, anbringen. Ggf. in der B-Säule der Fahrerseite.



Trocknungszeit des Klebers ca. 24 Stunden.

Waschanlagenfest nach ca. 48 Stunden.

Irrtum und Änderung sowie technische Weiterentwicklung vorbehalten !








**ATC<sup>®</sup>**  
**SCHNITZER**

**-Fitting Instructions-**

**Carbon Rear Spoiler**

**G22 – G82**

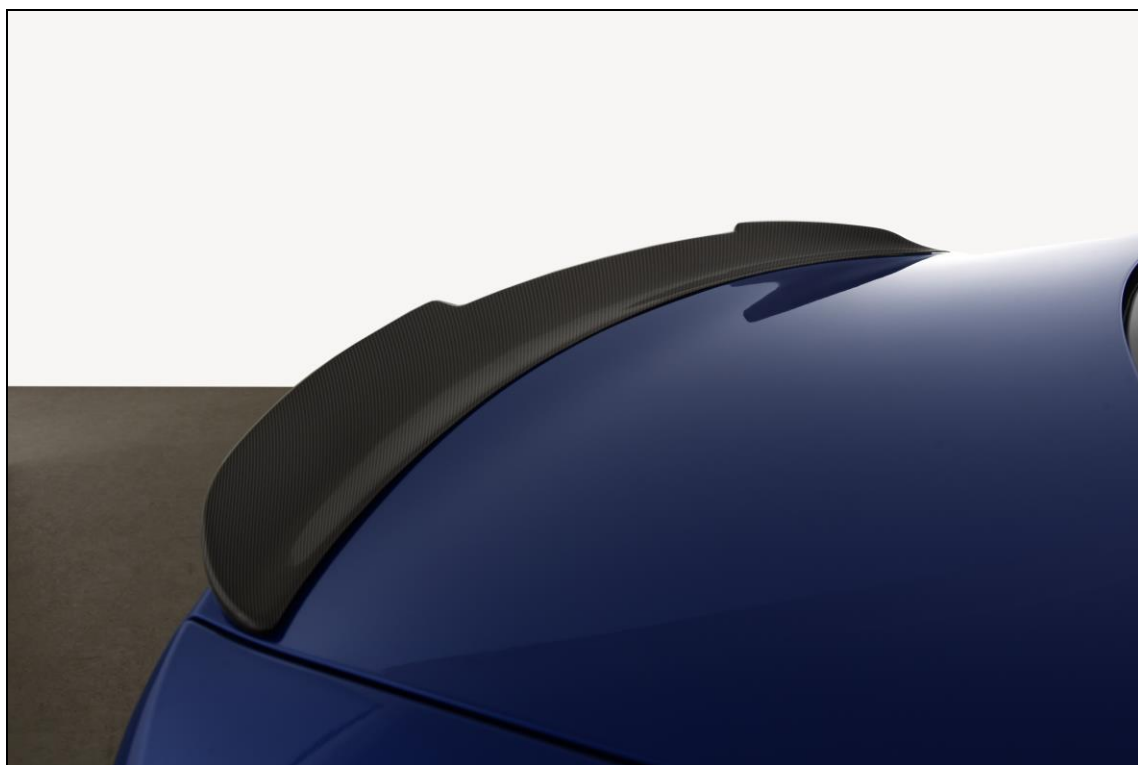

**5162 322 510**

# General Notes !



## AC Schnitzer Carbon Rear Spoiler G22 – G82

### Important Notes !

These Fitting Instructions must be read in full before beginning installation work. AC Schnitzer bears no liability for damage caused by incorrect installation !

These Fitting Instructions are intended solely for use by authorised AC Schnitzer dealers.

These Fitting Instructions are in all cases directed at professionals trained in BMW vehicles who have the corresponding specialist knowledge.

All diagrams show LHD vehicles, for RHD vehicles proceed accordingly or follow separate Fitting Instructions.

As manufacturer, we are obliged to point out that any changes you make to a vehicle licensed for use on public roads require approval by a test centre and registration in the vehicle documents. As the legal regulations may vary according to location, please contact the competent authorities for information.

### Fitting

Carry out all work in accordance with applicable safety regulations (e.g. wear safety goggles).

The adhesive surface of the AC Schnitzer Carbon Rear Spoiler should have a minimum temperature of over 20°C.

**Adhesive drying time approx. 24 hours. The vehicle can be washed in a car wash after approx. 48 hours.**

### Fitting Time (1 unit = 5 minutes)

The fitting time is **8 units**

### Required tools


Tape  
soft cleaning cloth

# Fitting Instructions

**AC**  
**SCHNITZER**

## AC Schnitzer Carbon Rear Spoiler G22 – G82

**A**

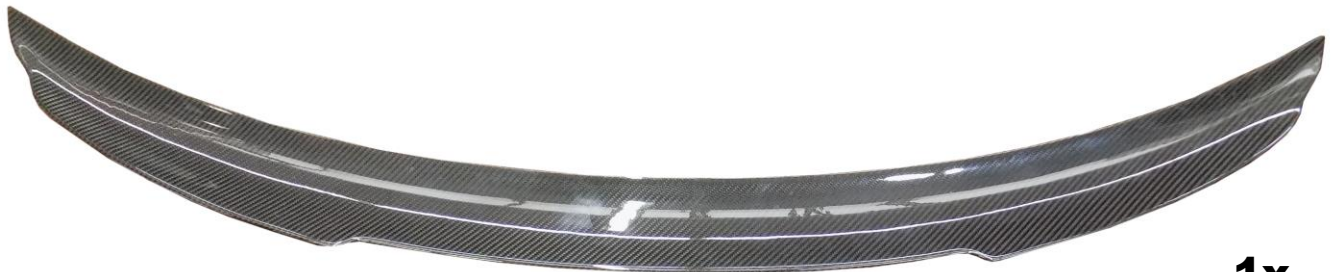

**1x**



**1x**



**1x**



**1x**

- A AC Schnitzer Carbon Rear Spoiler
- B AC Schnitzer sticker – black –
- C AC Schnitzer sticker parts identification
- D Adhesive inc. cleaner

Fitting Instructions No: 5162 322 510 / Issue: 20.05.2021 / TSch

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 / [www.ac-schnitzer.de](http://www.ac-schnitzer.de)

# Fitting Instructions

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Rear Spoiler G22 – G82

### Fitting the AC Schnitzer Carbon Rear Spoiler

**Carefully** heat the standard rear spoiler with a hot-air dryer or similar and pull the standard rear spoiler off the tailgate. Remove adhesive residues.

**Attention:**  
**Avoid damage to the paintwork.**

Clean the adhesive area on the tailgate with a soft cleaning cloth and the supplied cleaner. Adhesive surface must be dry and free of dirt and grease.



2

### Fig. 1

Open the tailgate and apply adhesive strip from inside to outside as shown.



Close tailgate again.

### Fig. 2 & 3

Remove paint and primer residues from the adhesive groove of the AC Schnitzer carbon rear spoiler, sand and clean with the cleaner supplied.





# Fitting Instructions

AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Rear Spoiler G22 – G82

Fitting ... (cont'd.)

**Fig. 4**

Apply supplied adhesive in the form of an adhesive bead with  $\varnothing$  5mm to the adhesive groove of the AC Schnitzer carbon rear spoiler all round.

4



**Fig. 5 & 6**

Place AC Schnitzer Carbon rear spoiler on the edge of the tailgate and align.

When aligning, make sure that the AC Schnitzer carbon rear spoiler is equally spaced on the right and left and that the contour rests against the edge of the tailgate.

5



6



# Fitting Instructions


AC<sup>®</sup>  
SCHNITZER

## AC Schnitzer Carbon Rear Spoiler G22 – G82

Fitting ... (cont'd.)

### Fig. 7

Pay attention to the contour of the AC Schnitzer carbon rear spoiler to the tailgate.

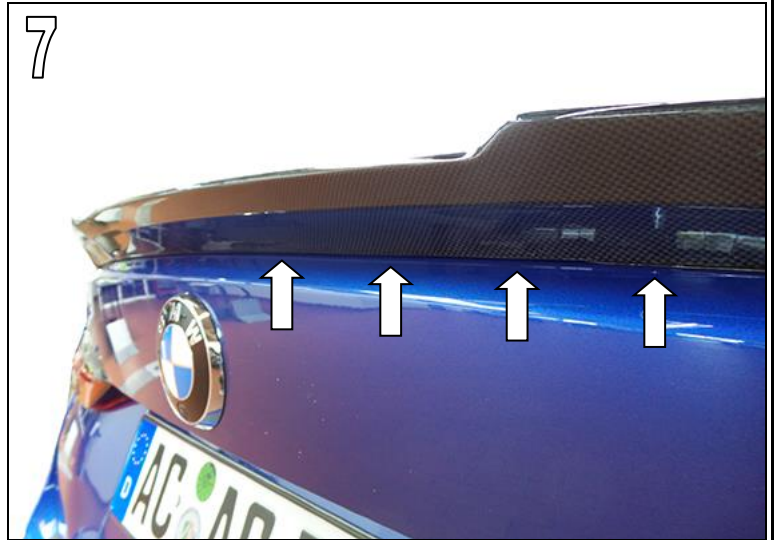

### Fig. 8

Fix AC Schnitzer rear spoiler with the previously applied adhesive tape.


Remove any surplus adhesive using the cleaner.



### Fig. 9

Press AC Schnitzer rear roof spoiler firmly and affix with masking tape.

Ensure that the AC Schnitzer carbon rear spoiler are firmly pressed in place. If necessary use AC Schnitzer mounting aids or re-bounds.

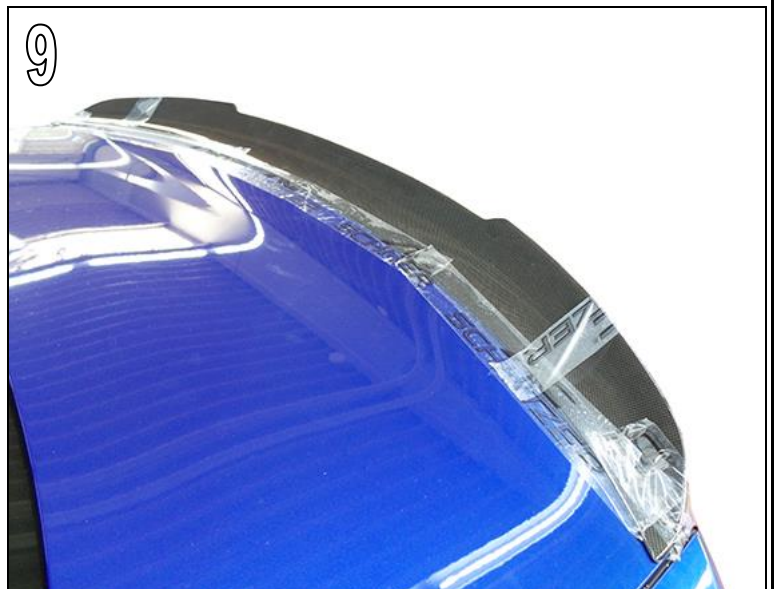

# Fitting Instructions

**AC**  
**SCHNITZER**

## AC Schnitzer Carbon Rear Spoiler G22 – G82

Fitting ... (cont'd.)

**Fig. 10**


Affix the AC Schnitzer sticker supplied in the recesses provided of the AC Schnitzer carbon rear spoiler.



**Fig. 11**

Apply the component identification sticker supplied in a visible location on the inside of the tailgate.

If necessary, in the B-pillar on the driver's side.

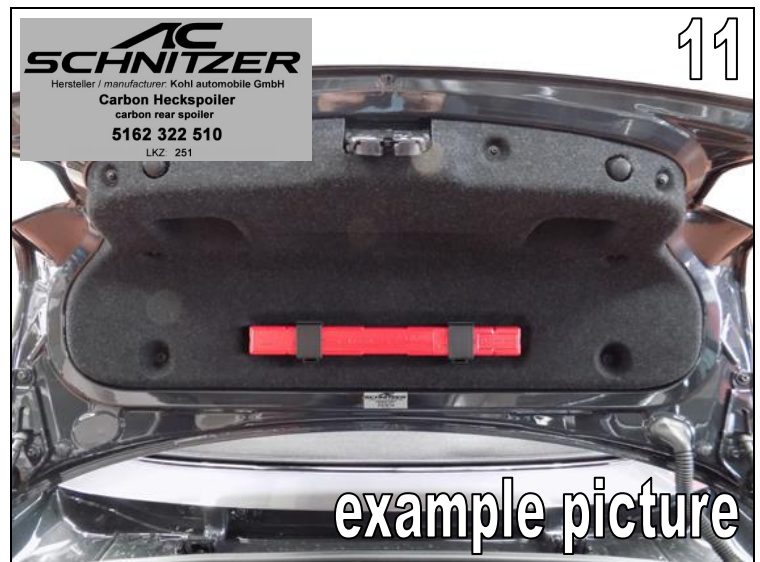

The adhesive drying time is 24 hours.

The vehicle can be washed in a car wash after approx. 48 hours.

*Errors, changes and technical developments excepted !*

Fitting Instructions No: 5162 322 510 / Issue: 20.05.2021 / TSch

AC Schnitzer - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 / [www.ac-schnitzer.de](http://www.ac-schnitzer.de)



