

AC[®] SCHNITZER

-Montageanleitung- Seitenschweller - Schutzfolie - G05



5171 305 120
(english version see page 3)

AC Schnitzer Seitenschweller Schutzfolie

Montage AC Schnitzer Seitenschweller Schutzfolie

Abb. 1

Klebefläche der der Seitenschweller reinigen und entfetten.

Tipp !

Klebefläche des Seitenschweller und AC Schnitzer Seitenschweller Schutzfolie mit einer Montageflüssigkeit / Sprühflasche und o.ä. anfeuchten. So ist die AC Schnitzer Seitenschweller Schutzfolie leichter auszurichten.

AC Schnitzer Seitenschweller Schutzfolien sind unterschiedlich. Rechts & links beachten. AC Schnitzer Logo steht in Fahrtrichtung vorn.

Abb. 2

AC Schnitzer Seitenschweller Schutzfolie mittig im Seitenschweller ausrichten.

Tipp !

Weiter Person zur Hilfe nehmen.

Abb. 3

Der Abstand zur Seitenkante des Seitenschweller sollte ca. 5mm betragen.


Abb. 4

AC Schnitzer Seitenschweller Schutzfolie andrücken und ggf. Luftblasen und Feuchtigkeitsblasen einer Montageflüssigkeit herausdrücken.

Achtung !

Nur Rakel mit einer Filzbeschichtung verwenden, da die Schutzfolie sonst zerkratzt würde.

Irrtum und Änderung und Weiterentwicklung vorbehalten !

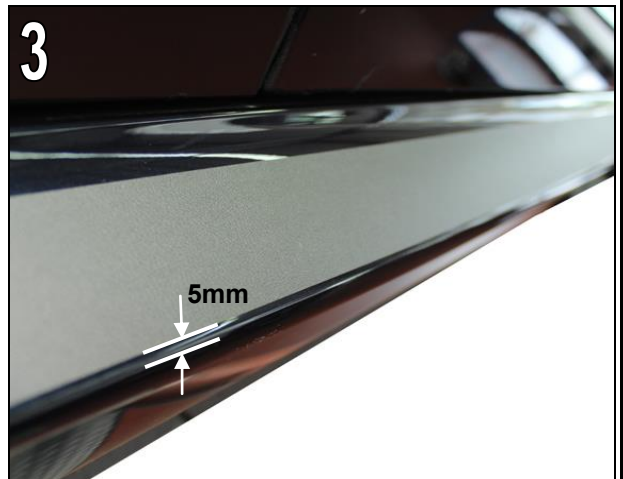

**AC[®]
SCHNITZER**

- Fitting Instructions -

Side Skirt

- Protective Film -

G05



5171 305 120

Fitting Instructions



AC Schnitzer Protective Film Side Skirt

Fitting the AC Schnitzer Protective Film Side Skirt

Fig. 1

Clean and degrease the adhesive contact surface on the side skirt.

Tip !

If the adhesive contact surface is wet, installation fluid / spray bottle or similar the protective film is better to align.

AC Schnitzer protective films are different. Note right & left. AC Schnitzer logo is in front in the direction of travel.

Fig. 2

Align AC Schnitzer protective film centrally at the edge.

Tip !

Take another person to help.

Fig. 3

Distance to outer edge of the rear skirt should be approx. 5mm.


Fig. 4

AC Schnitzer protective film and, if necessary, press out air bubbles and moisture bubbles of an installation fluid.

Note !

Only use a scraper blade with a felt coating, otherwise the protective film would be scratched.

Subject to errors and modifications !

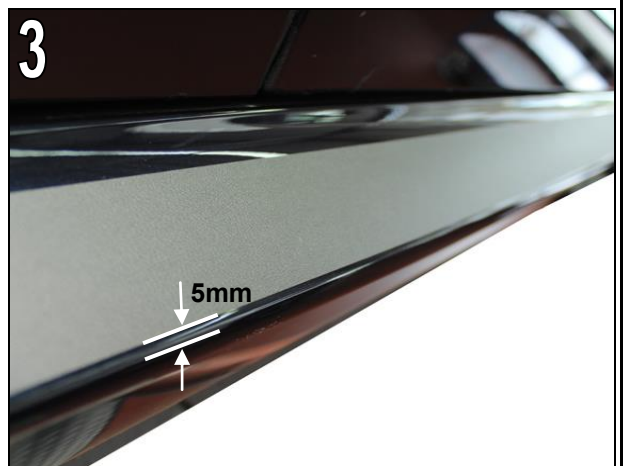

Fitting Instructions no.: 5171 305 120 / Issue: 18.06.2019 / TSch

AC Schnitzer - automobile Technik - Neuenhofstraße 160 - D - 52078 Aachen - Tel. 0241/5688 -130 Fax -135