

**AC[®]
SCHNITZER**

-Montageanleitung-

Seitenschweller

- Schutzfolie -

G80 / G82-G83



5171 382 120

(english version see page 5)

AC Schnitzer Seitenschweller Schutzfolie

Montage AC Schnitzer Seitenschweller Schutzfolie

Abb. 1

Klebefläche der Serienseitenschweller reinigen und entfetten.

Klebefläche des Serienseitenschwellers und der AC Schnitzer Seitenschwellerschutzfolie mit einer Montageflüssigkeit / Sprühflasche und o.ä. anfeuchten. So ist die AC Schnitzer Seitenschwellerschutzfolie leichter auszurichten.


AC Schnitzer Seitenschwellerschutzfolien sind unterschiedlich. Rechts & links beachten. AC Schnitzer Logo steht in Fahrtrichtung hinten.

Abb. 2 bis 4

AC Schnitzer Seitenschwellerschutzfolie mit dem hinteren Ende an der Markierung (**Spitze der Seitenschwellerkontur**) ansetzen, ausrichten und andrücken. Luftblasen und Feuchtigkeitsblasen einer Montageflüssigkeit herausdrücken.

Tipp !

Weiter Person zur Hilfe nehmen.

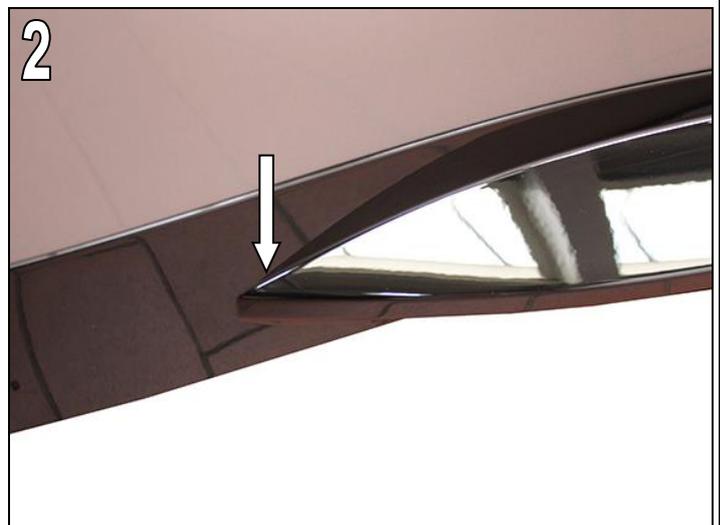

AC Schnitzer Seitenschweller Schutzfolie

Montage....



Abb. 5

Der Abstand zur Seitenkante des Serienseitenschwellers sollte ca. 3mm betragen.

Achtung !

Nur Rakel mit einer Filzbeschichtung verwenden, da die Schutzfolie sonst zerkratzt würde.



Irrtum und Änderung und Weiterentwicklung vorbehalten !

AC[®]
SCHNITZER
jenseits der Serie.

**AC[®]
SCHNITZER**

-Fitting Instructions-

Side Skirt

- Protective Film -

G80 / G82-G83



5171 382 120

AC Schnitzer Protective Film Side Skirt

Fitting the AC Schnitzer Side Skirt Protective Film

Fig. 1

Clean and degrease the adhesive contact surface on the side skirt.

If the adhesive contact surface is wet, installation fluid / spray bottle or similar the AC Schnitzer side skirt protective film is better to align.

AC Schnitzer side skirt protective films are different. Note right & left. AC Schnitzer logo is in rear in the direction of travel.


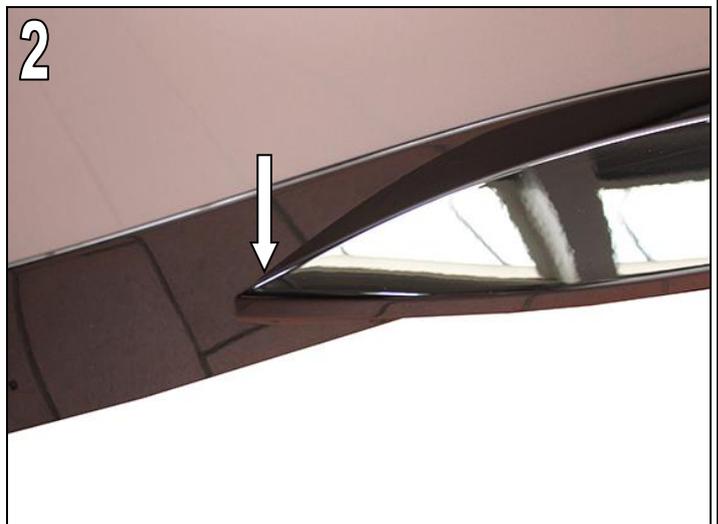


Fig. 2 until 4

Place AC Schnitzer side skirt protection film with the rear end at the marking (**tip of the side skirt contour**), align and press on. Press out air bubbles and moisture bubbles of assembly fluid.

Tip !

Take another person to help.

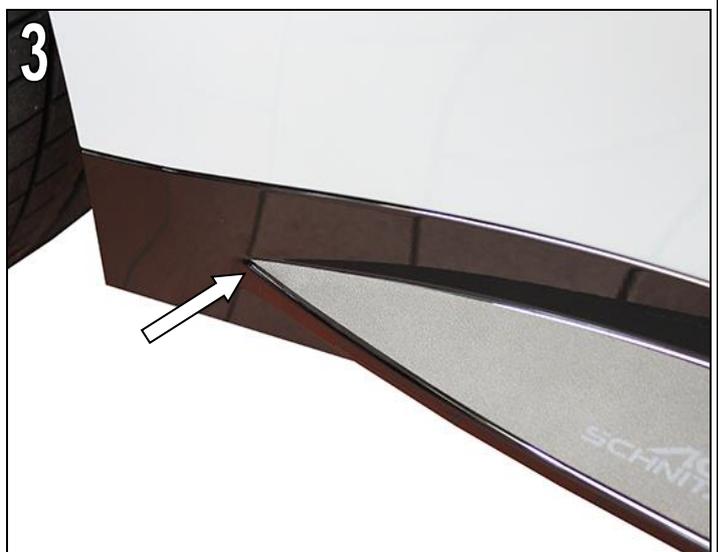

Fitting Instructions

AC Schnitzer Protective Film Side Skirt

Fitting....



Fig. 5

Distance to outer edge of the rear skirt should be approx. 3mm.

Note !

Only use a scraper blade with a felt coating, otherwise the protective film would be scratched.



Subject to errors and modifications !

